

MZS

electropneumatic spray valve



Zator
gluing solutions

**USER AND
MAINTENANCE
MANUAL**





ZATOR SRL

Via Galvani, 11
20095 Cusano Milanino (MI)
Italy

Tel. +39 02 66403235

Fax +39 02 66403215

info@zator.it

www.zator.it



UE Declaration of Conformity

Manufacturer:

ZATOR Srl

Via Galvani 11

20095 Cusano Milanino (MI)

Italy

Tel.+39 02 66403235

Fax +39 02 66403215

Email: info@zator.it

DECLARES

Under its responsibility that the electroneumatic spray valve:

Model	MZS	Year of manufacture	
-------	-----	---------------------	--

Is in compliance with UE directives, with relation to the following ones and/or parts of them applicable to this product:

- Directive 2006/42/CE of European Parliament and Council of the 17th of May 2006 regarding to machines and that modify directive 95/16/CE (recasting)
- Directive 2014/35/UE of European Parliament and Council of the 26th of February 2014 regarding the harmonization of the UE Countries laws about the the making available on the market of electrical equipment intended to be used within certain voltage limits (recasting)
- Directive 2014/30/UE of European Parliament and Council of the 26th February 2014 regarding the harmonization of the UE Countries laws about the electromagnetic compatibility (recasting)

Cusano Milanino

Legal Representative




ZATOR S.r.l.

Index

1	GENERAL INFORMATION	8
1.1	Introduction	8
1.2	Warranty	9
1.3	Warranty restrictions	10
1.4	Maintenance service request	11
1.5	Spare parts request	11
2	SAFETY RULES AND REGULATIONS	12
2.1	Safety and environment general informations	12
2.2	P.P.E. Personal protective equipment	13
2.3	Risks, protections, warnings and cautions	13
2.3.1	General safety	13
2.3.2	Unavoidable dangers and risks unavoidable	14
2.3.3	Safety devices adopted	15
2.3.4	More general safety precautions	15
2.4	Environmental condition	16
2.5	Installation - General instructions	17
2.6	Use of adhesives, glues or other fluids	18
3	TECHNICAL DESCRIPTION	20
3.1	Valve functions	20
3.2	Technical data	20
3.3	Functioning description	21
4	INSTALLATION	22
4.1	Fixing and placement of the valve	22
4.2	Fluid supply connection	23
4.3	Electrical connection	23
4.3.1	Connector	23
4.4	Drive air connection and nebulization	23
4.5	Installation diagram	24
4.6	Valve activation	24

5	VALVE ADJUSTMENTS	25
5.1	Fluid quantity adjustment	25
5.2	Needle travel adjustment	25
5.3	Nebulization adjustment	26
6	MAINTENANCE	27
6.1	General norms	27
6.2	Maintenance program	27
6.3	Cleaning and/or replacement of the nozzle	28
6.4	Valve disassembly	30
6.7	Valve assembly	33
7	TROUBLE SHOOTING	36
8	MODELS	37
9	PARTS LIST	38
10	DIMENSIONS	40

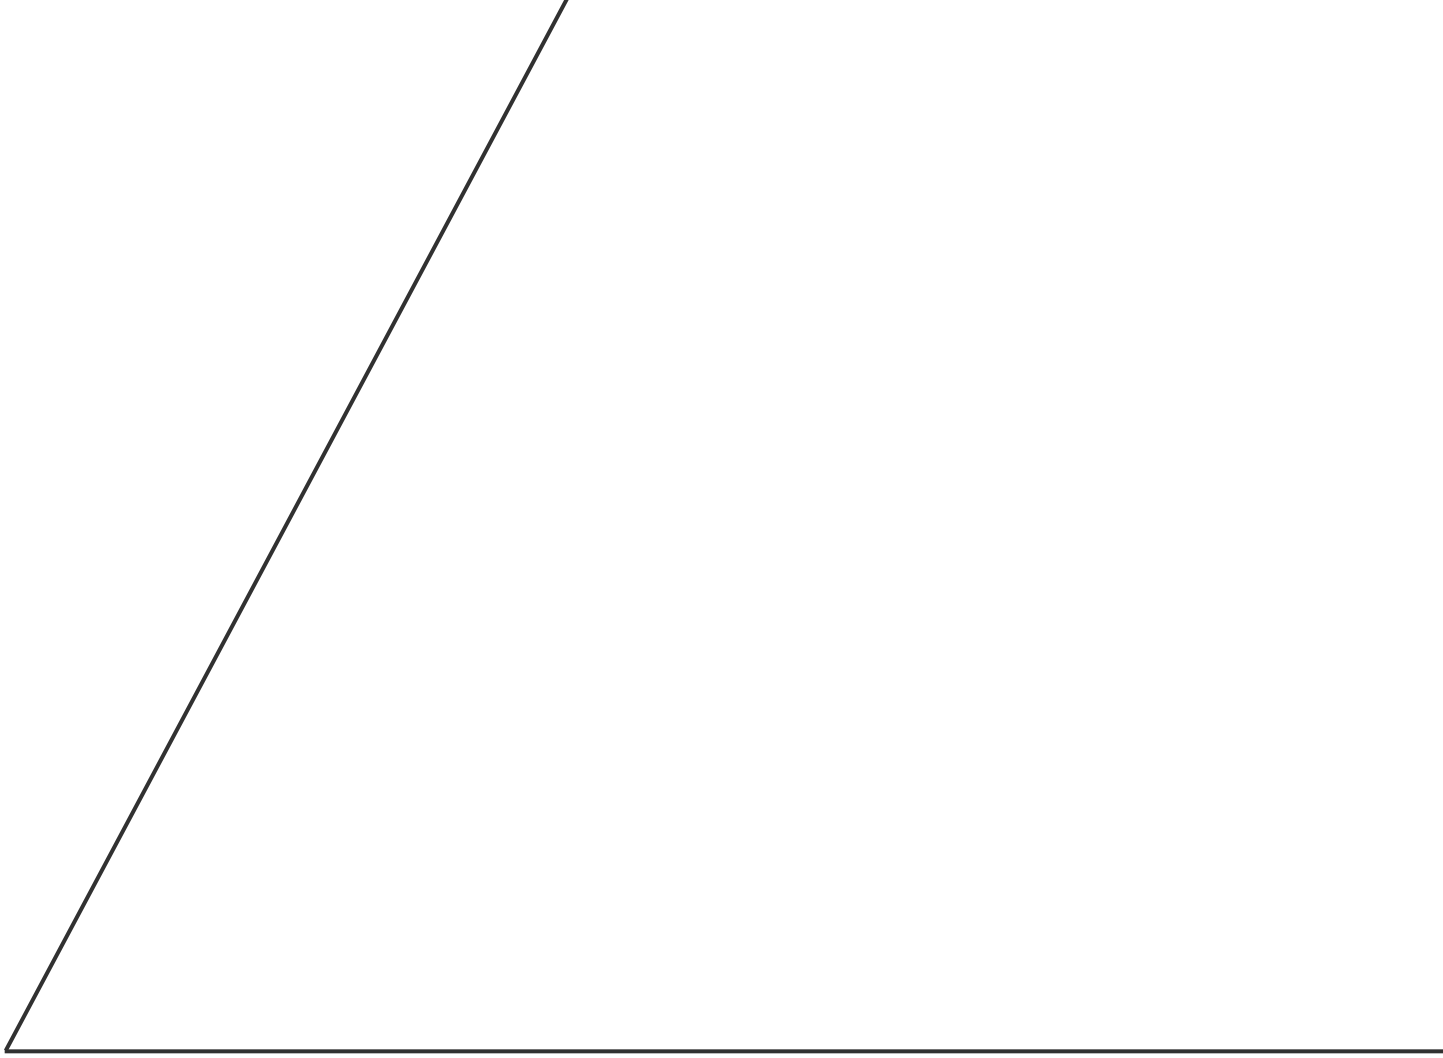

USER AND MAINTENANCE MANUAL

electropneumatic spray valve **MZS**

1 GENERAL INFORMATION

1.1 Introduction

This manual is an essential part of the pneumatic valve and is destined to trained and well-informed personnel, which is aware of the machine performance at the risk conditions to which it may be exposed. This document supposes that in the plants where the valve is destined, are complied the present norms of safety and hygiene of the work.

Zator Srl won't be liable for actions or improper connections made by unqualified and unformed personnel.

Instructions, drawings and documentation contained in this manual are of reserved technical disposition, only for Zator Srl property and may be not reproduced in any way, neither in full or partially reproduction; not translated into another language, or transmitted in any electronic or mechanical means or form, without written permission of Zator Srl.

The data and values expressed in the manual are approximate and variable depending on fluids, applications and methods of use.

Zator Srl doesn't assume any responsibility regarding the accuracy of the contents of this manual.

The drawings and technical data in this document is updated to the date of their publication and Zator Srl reserves the right to change, without notice, the contents of this manual.

It is therefore forbidden for Technician and Operators of the maintenance to use this manual for different purposes from those relatives to the care and maintenance of equipment in question.

This manual includes the installation, use and maintenance norms of the pneumatic valve in safety.

Test in production workshop

The manufacturer guarantees the valve, that this document refers, has been inspected and tested by his production workshop.

"At term of law we reserve the property of the data and technical information with the prohibition of play, communicate to third parties or use them anyway for any other executive purpose and what is shown in this document is the property of the Manufacturer"



1.2 Warranty

This warranty is valid for 12 months from the actual delivery.

During the warranty period Zator Srl undertakes to remove in the necessary time the obvious faults and flaws of material and/or production, on condition that machine or equipment has been used properly, according to the best rules of behaviour and maintenance provided in this manual.

The flawed parts under warranty are fixed or replaced free from Zator Srl in the time compatibly necessary, understood that the Zator Srl is exempted from each responsibility for any title, while the buyer give up to ask damages or costs, including those resulting from the temporary not use of the purchased machinery for all the time is necessary to put it back in efficiency; The transport and/or the forwarding costs, the outward and the return trip costs relative to the operation by the Zator's technicians in the Buyer address are always on charge of the buyer.

The labor costs relative to the operation of the Zator's technicians in the Buyer address for the removal of flawed parts under warranty, are on charge of Zator Srl, except these cases when the nature of the flaw can be easily removed on place by the Buyer.

This commitment of Zator Srl excludes each other warranty effects provided by the law.

The warranty for the replaced or repaired spare parts of the pneumatic valve finishes the same day of the warranty expiration date of the pneumatic valve, the replaced part warranty however doesn't has lifetime less than three months after its installation.

Replaced parts during the warranty period by the seller are free acquired in the same place with new parts.

Are excluded from the warranty all the tools and consumable materials, possibly supplied by Zator Srl with the machine.

It are excluded and renounced by the buyer every pretensions of items/people damages reimbursement on charge to Zator Srl, for any titles, even if the damages were depending from manufacture or material flaws. It's of equal excluded and given up any reimbursement for people and/or items damages depending on the practise of the pneumatic valve. Parts replaced free remain of Zator Srl property.

Elapsed the warranty period every operation will be on charge to the buyer.

Application fields

- Packaging machines
- Paper converting industry
- Printing machines
- Tobacco industry
- Assembly industry
- Food industry

Condemnation of conformity flaw - Goods reception

The original configuration of the pneumatic valve never must be changed.

On goods reception, check that:

- The packaging is intact
- The exact correspondence of the commissioned material

In case of damages or wrong delivery contact immediately Zator Srl.

The buyer, on penalty of warranty decadence, must report in writing the flaw conformity or fault of the pneumatic valve to the seller, specifying in detail the nature, within eight days from their discovery.

In no case the condemnation of conformity flaw or fault may be validly made after the expiration date of the warranty terms.

Also the buyer decays from the warranty if doesn't allow each reasonable control that the seller requires. It's excluded from this warranty the most damage caused to the machine by the failure timely condemnation to the seller of a conformity flaw or fault of the pneumatic valve.

1.3 Warranty restrictions

This warranty is only valid for products of new construction.

This warranty is limited to the reparation or replacement, by the seller, of each parts of the machine or supplied material that results flawed, after checking the existence of the flaw.

In no case the seller will be liable for every consequential or indirect flaws or otherwise derived from production cycle interruption or machine stoppage.

The seller is not liable for flaws of the pneumatic valve derived from the use of devices, equipments, etc. that are enquired and provided by the customer and installed on the machine to change its use compared to the original design.

The seller is not liable for every conformity flaws of the pneumatic valve or faults owed for the normal wear of those parts that, by their nature, are subject to rapid and continuous wear.

The seller also is not liable for damages resulting from improper use of the equipment and from the non-observance of the norms expected for the execution of the ordinary periodic maintenance.

The seller is not liable for conformity flaws of the pneumatic valve or faults that depends on changes, reparations, alterations or tampering attributed to the buyer and however non-authorized personnel of the buyer.

The costs relative to the wear materials necessary for test and restart the pneumatic valve are on charge of the buyer.



1.4 Maintenance service request

Contact:

Technical office of Zator S.R.L.

Via Galvani 11 - 20095 Cusano Milanino (MI) - Italy
e-mail: info@zator.it www.zator.it
Tel.: +39-0266403235 Fax.: +39-0266403215

Always forward the request in writing (fax or email) and give all the information to identify the machine object of the request:

- **Model**
- **Serial number**

Please refers to the frontispiece of this manual or directly to the nameplate on-board to the machine or to the serial number of the pneumatic valve.

1.5 Spare parts request

The customer is responsible to purchase original spare parts that guarantee him to keep efficient and safe the pneumatic valve.

The disassembly and assembly operations must be performed according to the manufacturer's instructions.

Contact the Technical Office of Zator Srl which will give to you the specifications to do the request of the parts and will provide the information about their replacement.

To order the spare parts is necessary to report completely all identification data of the pneumatic valve and those of spare part to be replaced.

The illustrations in this document are for example.

2 SAFETY RULES AND REGULATIONS

The *electropneumatic valve MZS* is designed and manufactured in compliance with the current safety standard. Only trained personnel is authorized to install and use the valve. For the electropneumatic valve MZS are provided only and exclusively the application fields describe in this manual. All data and parameters indicated in this manual must be respected. Any other use is considered improper.

All operations performed with the electropneumatic valve MZS must be carry out in compliance with the following current safety rules and regulations written in part:

1. Rules of fire prevention
2. Directive 2006/42/CE of European Parliament and Council of the 17th of May 2006 regarding to machines and that modify directive 95/16/CE (recasting)
3. Directive 2014/30/UE of European Parliament and Council of the 26th February 2014 regarding the harmonization of the UE Countries laws about the electromagnetic compatibility (recasting)
4. Rule 2016/425/UE of the 9th of March 2016, about the personal protection equipment and that abrogates the directive 89/686/CEE of the Council

2.1 Safety and environment general informations

Before the start-up of the electropneumatic valve the personnel must be adequately informed and trained on its use, direction and start-up process, as well as the safety norms to be performed and also observe how it is prescribed in this document and in other documents possibly attached to the microprocessor control.

The employer must provide to instruct the personnel on the risks of injury, on safety devices and accident prevention general rules provided by the community directives and the legislation of the country where the microprocessor control is installed.



CAUTION: Always disconnect the power supply before proceed to carry out any maintenance or adjustment operations. Discharge the fluid pressure before to proceed to carry out any maintenance or adjustment operations.

2.2 P.P.E. Personal protective equipment

For personnel who will work on the electropneumatic valve, for any functions (installation, assembly, demolition, maintenance and operation) they will be provided with appropriate P.P.E. - Personal protective equipment of type approved and certificate by C.E.:

- **anti-solvent gloves**
- **cut resistant gloves**
- **masks**
- **coverall (no floating coverall)**



CAUTION: The clothes of who will operate on the electropneumatic valve for any functions must be in compliance with the essential safety requirements defined by the regulation 2016/425/UE of 9th of May 2016 and by the actual laws in the country of use.

2.3 Risks, protections, warnings and cautions

2.3.1 General safety

In accordance with the Machine Directive it means for:

DANGER ZONE = area within or near the electropneumatic valve where the presence of an exposed person make a risk to the safety and health of himself.

EXPOSED PERSON = any person that is placed entirely or partially inside a danger zone.

OPERATOR = person who is appointed to install, operate, adjust, perform ordinary maintenance and clean the machine.

All risk areas of the electropneumatic valve have been checked and consequently have been taken the necessary precautions to avoid risks to people and damage to the components of the electropneumatic valve.

Safety glossary

Intended purposes

By this term it refers to the use of the machine as described by the manufacturer.

For “intended purposes” also refers to the use of the unit through its design, its construction and function.

Secondary risks

Secondary risk are unavoidable despite all the preventive measures that are taken.

Competent personnel

A person is competent when it acquired sufficient knowledge in a specific field both through the professional instruction and with the experience. A competent person must get to know with the specific norms for the safety on work and for the accident prevention and generally with the technical knowledge rules.

Trained personnel

A person is trained when it is informed by a competent person about the activities it must perform and the risks relative to improper behaviour and, if necessary, it has received the required training. Also a trained person must be informed about the safety devices and protective measures.

Skilled personnel

A skilled person is a competent one or sufficiently trained.

The operator must be informed of the position and operation of all commands and features of the valve. The maintenance and start-up operations must be performed by qualified technicians after properly setting up the valve.

The unauthorized tampering or replacement of one or more valve parts, the adoption of accessories that modify the original use of the valve and the purpose of different consumer product from those recommended in this manual, can become a cause of injury risks.

The protective devices must not be removed or tampered for the risk to reduce the accident prevention features of our products.

To highlight particular situations for the safety of the instrument, are used the following graphic symbols:



CAUTION and/or DANGER – Accident prevention rules for the operator



R. R. – RESIDUAL RISKS

WARNING - There is the possibility to damage the machine and/or its components

PRECAUTION - Further information about the operation in progress

NOTE - Provides useful information

2.3.2 Unavoidable dangers and risks unavoidable

On the electromagnetic valve also equipped with protection systems remain the following **R. R. RESIDUAL RISKS**:

A - Danger due to electricity in general

B - Danger due to inhalation of dangerous vapours to health and fire danger

C - Danger due to problems/malfunctions of the electromagnetic valve

This can lead an excessive increase of dispensing of glue as well as a fire danger or dangers due to inhalation of dangerous vapours to health.

D - Risk due to the projection of fluids under pressure

In case of improper maintenance of the hydraulic system parts.

E - Risk of fire

Prohibition of smoking and/or high temperature objects near the electropneumatic valve.

2.3.3 Safety devices adopted

In order to safeguard the health and security of the exposed people, the machine is equipped with:

- Fixed guards: removable only by tools
- Mobile guards: depending on the model of electropneumatic valve

The valve can be equipped with area delimiters that prevent operator access to dangerous areas (see R.R.).

2.3.4 More general safety precautions



CAUTION: The maintenance operations must be peremptorily carry out by qualified and authorized personnel.

Make sure the passages around the machine is not hindered by misplaced cables and dangerous for personnel.

The user must always put available to the operators, in the areas that require it, safety goggles, gloves, and any other necessary protections; it must also make sure that these safeguards are being used.

The areas that require the use of protective clothing must be marked with warning signs and pictograms indicating the residual risk



CAUTION: is ABSOLUTELY FORBIDDEN to tamper or remove the plates and the protections on the electropneumatic valve.

The manufacturer declines all responsibility for the safety of the electropneumatic valve in case of omitted observance of the prohibition.

CE norms signage: examples of danger symbols



Danger



High voltage



Flammable



P
Toxic



C
Corrosive



O
Combustive
agent

2.4 Environmental condition

Operating environmental conditions

The electropneumatic valve is designed to operate in a closed local, protected from the atmospheric agents, with all the safety requirements resulting from the laws in force.

Waste disposal

The buyer is responsible to follow the correct process and the norms in force in the country for the disposal of waste and residual material.

Disposal

The pick up of special and/or toxic-noxious waste must be committed with contract to specifically authorized companies and who do the transport materially must be in ownership of the required authorizations and must be turn out to be registered in the haulers register.

It's absolutely forbidden to throw waste in the environment.

For the disposal of the packaging, the user must follow the laws in force in the country of plant installation.

Fire material

There is no fire dangers by the operation of the electropneumatic valve.



CAUTION: The customer must provide an appropriate fire-fighting system, evaluating its internal situation and respecting the laws in force. In case of fire, disconnect immediately the power switch to interrupt the power supply.



CAUTION: explosive atmosphere

The electropneumatic valve is not designed to operate in explosive atmosphere. It is forbidden to use the machine in an explosive atmosphere, even if only partially explosive.

Lighting

The customer is responsible for ensuring an appropriate lighting of the local where the valve is installed, according to the laws in force in your country and the EU directives.

Vibrations

The electropneumatic valve doesn't make vibrations.

2.5 Installation - General instructions

Zator's products are manufactured in compliance with the laws in force during its construction. The personnel will be trained and qualified to take advantage of the installed valve requirements. The personnel must operate in a comfortable space that could be guarantee safety and hygiene for the operator. In case of a different destination or necessity of use of the valve, it's appropriate to refer to the technical offices of the Zator Srl.

Goods in packaging

Outside the package are indicated all the information about the content identification and the safety movement:

- address of the sender and the addressee
- dimensions: length – width – height
- gross – net – tare weight
- annotations and pictograms (ex. brittle, handle with care, high)

CAUTION: The customer must check the condition of the goods upon its arrival.

Predispositions: choose the installation space

Without prejudice to specific dispositions, the customer will be provide to:

- Appropriate logistic arrangement for the placement and conduction of the electropneumatic valve
- Power supply, including the protective conductor usually called "GROUNDED"
- Electrical equipment arrangement and possible pneumatic system
- Wear materials

For the electrical connection it is necessary to have a preferential line of power supply with the features listed in "technical features".

Pneumatic connections



CAUTION: The compressed air must be free of humidity. It is necessary to assemble on the compressor one or more automatic condensation outlet; the air must be filtered and dried out. Make sure that in the pneumatic circuit is not inserted any type of substances (ex. lubricants or other substances).

2.6 Use of adhesives, glues or other fluids

The use of the valve with adhesives, glues or general fluids must be respect the following basic rules.

Before use a specific type of fluid check that:

- The fluid viscosity is compatible with the features of the valve
- The characteristics of the fluid meet the desired requirements
- The datasheet of the fluid provided by the manufacturer includes all the informations about the fluid such as: viscosity, applications, gluing time (for glues or adhesives) and storage
- The storage time of the fluid has not been exceeded
- The fluid has not been exposed to temperatures near or below than zero therefore it has deteriorated
- The packaging of the fluid are sealed

For the use of **special adhesives, glues or fluids** we recommend to contact the Zator company to verify the compatibility of the application.

Before use a different type of fluid clean accurately the valve to avoid possible contamination of the new fluid.

When used water-based adhesives of glues they are easily removable with water in their liquid state. However, when they harden is more difficult to remove it. For this reason, before long stop it is recommended to wash accurately the valve. Please refer to the maintenance program shown in this manual.



3 TECHNICAL DESCRIPTION


3.1 Valve functions

The *electropneumatic spray valve MZS* has been designed and realized for its use on various kind of production machines: its design and versatility make it ideal for any applications that require the use of spray valves. It's a dispenser of low and medium viscosity glues, adhesives and fluids. The valve is pneumatically controlled by a solenoid control valve and an external solenoid valves for the nebulization of the fluid. It's strength and compact size. It has the particularity to have nozzle and cap with anti-stick coating and a self-cleaning needle which ensure the long operation time of the valve. The micrometric adjustment allows a fine control of the glue quantity dispensed.



3.2 Technical data

Available nozzle diameters	from 0,3 to 1,5 mm
Air pressure control	min. 5 bar
Drive type	double action
Maximum working pressure	25 bar
Coil	24 Volt
Nebulization pressure	from 0,5 to 2,5 bar
Weight	510 g

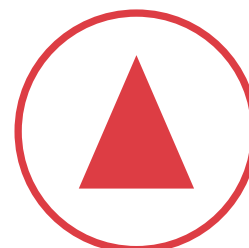

Spray


fluid types

- adhesives and glues
- inks
- paints
- lubricants
- low viscosity fluids

3.3 Functioning description

The valve^{3A} is composed mainly of:

1. Air cap
2. Nozzle
3. Needle
4. Air piston
5. Spring
6. Solenoid valve
7. Valve body

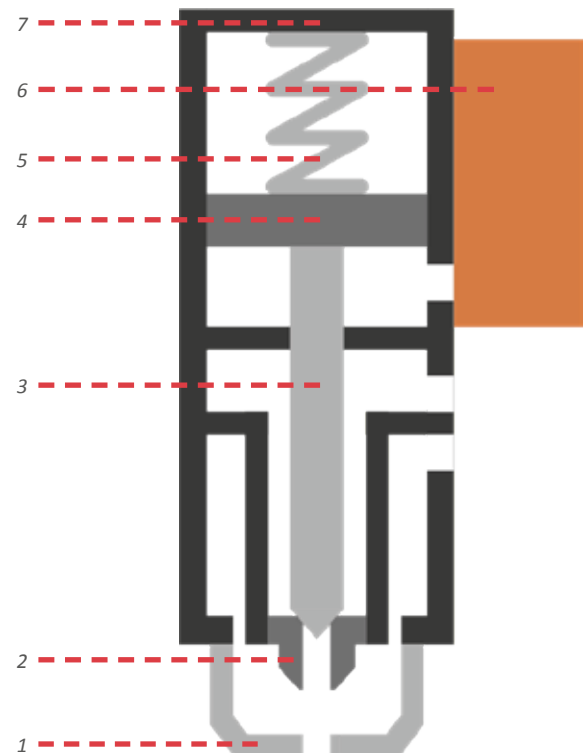


3A. Internal section diagram of the main components (for illustration only)

Functioning diagram

1 When the valve is not activated, the needle closes the nozzle seat, pushed by a spring, and stops the fluid under pressure to flow out from the nozzle hole.

2 When the external solenoid valve that allow the drive air to flow inside the piston chamber is activated, this action activated the valve. Then the piston moves back together with the needle, allowing the fluid flow to come out from the nozzle. At the same time, the activation of the second external solenoid valve allows the nebulization air to flow inside the air cap where it mixes with the fluid and comes out from the air cap in spray form.

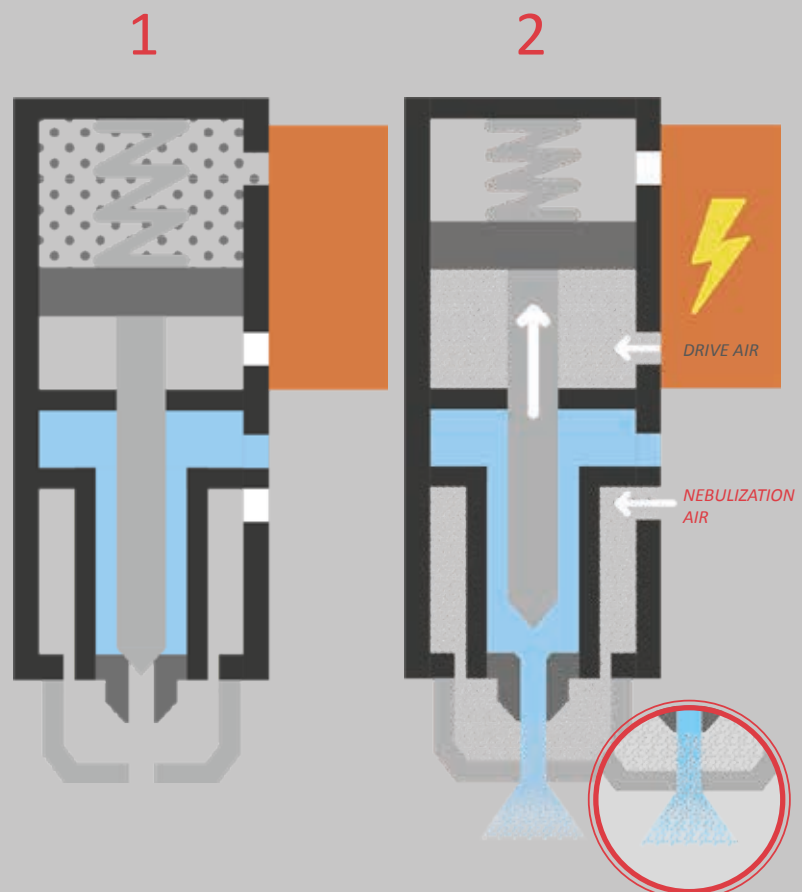


4 INSTALLATION

4.1 Fixing and placement of the valve

The MZS valve must be fixed on a proper bracket by using the **threaded holes** (M5 dimension) machined on the valve body.

A vibration-free environment and a good accessibility for regulation, cleaning and maintenance and a good fixing of the valve to the support/bracket and of the latter to the machine must be guaranteed.

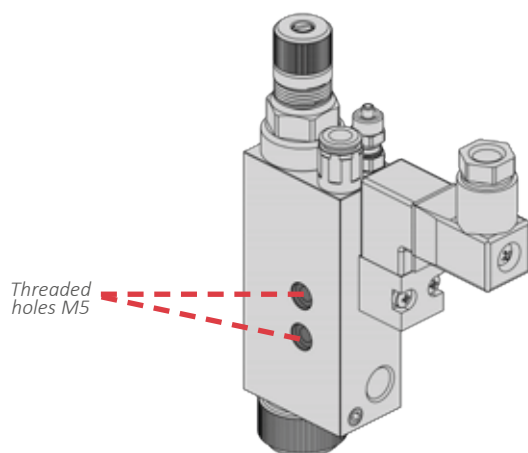


The **ideal working position** of the valve is vertical, with the nozzle facing downwards. It's possible to tilt the valve of $\pm 45^\circ$ degrees.

The **recommended distance** between the nozzle and the surface to be glue is between 20 and 40 mm.

Note that this distance defines the size of the application area of the nebulized fluid.

Increasing the distance between the valve and the surface to be glue/coat you will obtain a bigger area with a little quantity of applied fluid. Conversely, decreasing the distance between the valve and the surface, you will obtain a smaller area with a big quantity of applied fluid (for details see *section 5.3 - Nebulization adjustment*).


Other different positions are possible upon approval of the Zator.

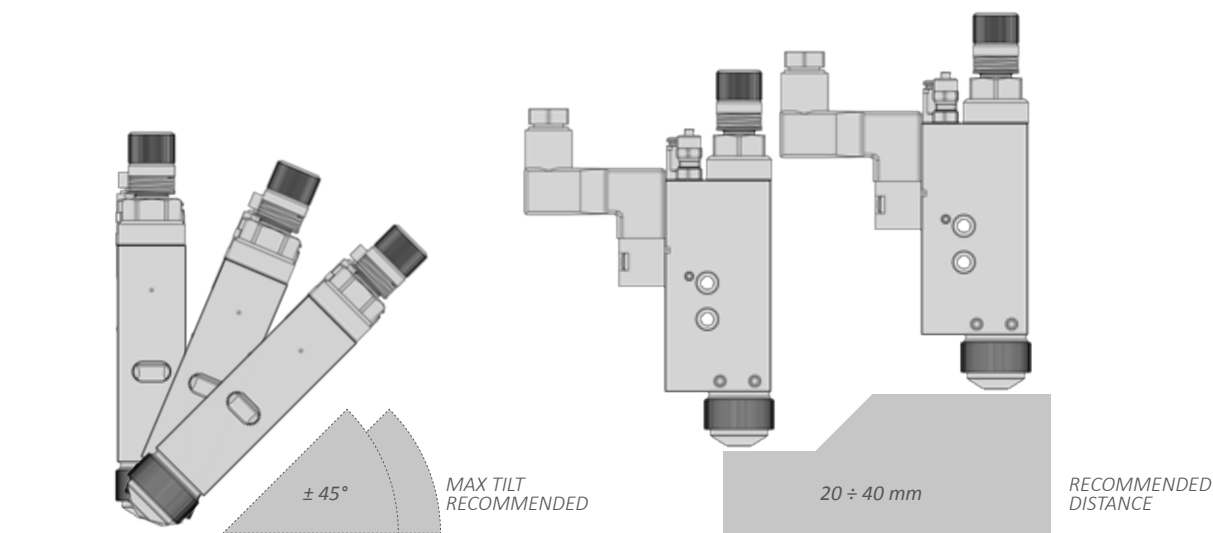

4.2 Fluid supply connection

The valve must be connected to a *glue feed units**. A *flexible plastic pipe** (for applications up to 8 bar) must be connected to a *pipe fitting (G1/8")** to be screwed on the fluid supply connection of the valve. For applications with working pressure **over 8 bar** use *fittings and pipes** for high pressure must be used.


**Parts are supplied separately*

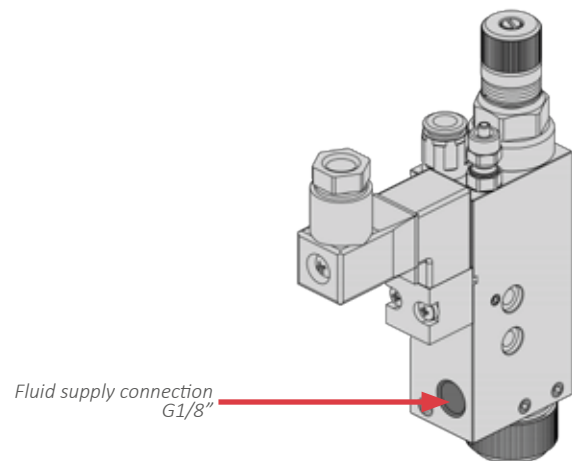

4.3 Electrical connection

Connect an *electrical cable** with cross-section not less than 0.35 mm to the solenoid valve connector.


**Parts are supplied separately*

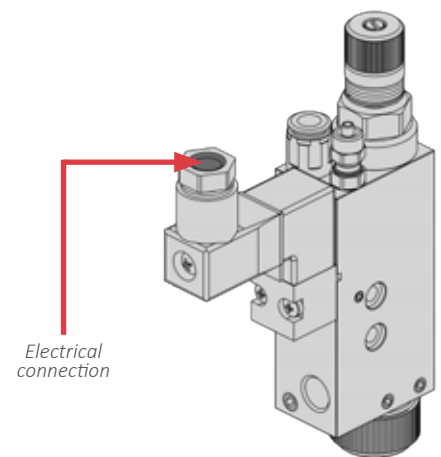

4.3.1 Connector

Connect an *electrical two poles cable**, with cross-section not less than 0.35 mm, to *electrical terminals 1 and 2*.


**Parts are supplied separately*

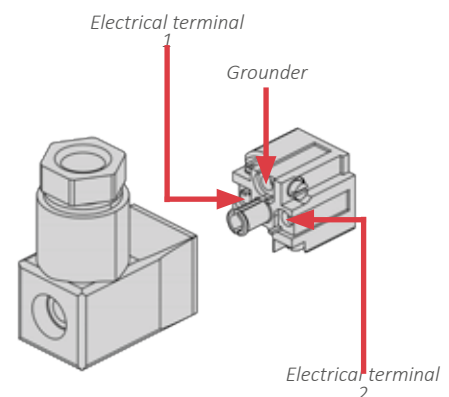

4.4 Drive air connection and nebulization

- 1 Connect a *pipe Ø6x4* to the air connection on the valve. The drive air pressure must be 5 bar.


- 2 Connect a *pipe Ø6x4* to the air connection on the valve. The nebulization air pressure must be between 0,5 and 2,5 bar.

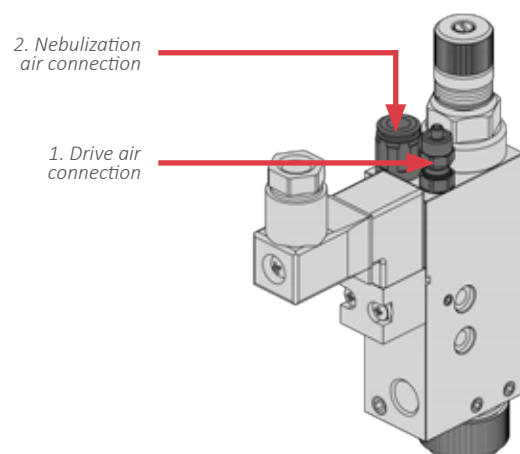

4.5 Installation diagram

Provide for all connections a pipes length such as to ensure a good accessibility to the valve to be able to easily carry out the operations of maintenance and cleaning.

The required connections for the functioning of the MZS valve are:

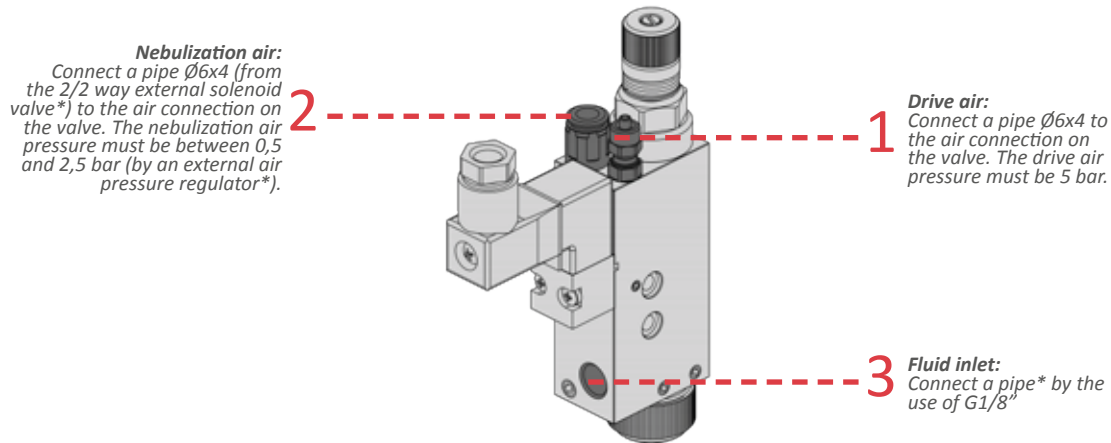

*Parts are supplied separately

4.6 Valve activation


The MZS valve must be controlled by two solenoid valves, one fitted on the valve and a second one external*:

- Solenoid valve fitted on the valve for the *drive air*;
- 2/2 way external solenoid valve for the *nebulization air*.

The drive pressure must be minimum 5 bar.

The nebulization pressure must be between 0,5÷2,5 bar.

The *nebulization air* must be **activated before** and **deactivated after** the *drive air* to avoid that the glue can dirty the nozzle and the air cap.

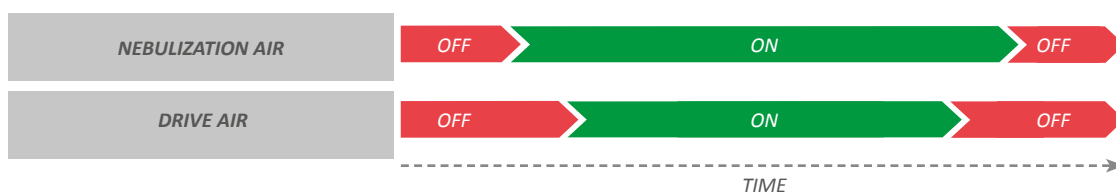

*Parts are supplied separately

5 VALVE ADJUSTMENTS

5.1 Fluid quantity adjustment


The adjustment of the dispensed fluid quantity (ex. glue) by the valve is determined by:

- The nozzle diameter: **greater diameter → more fluid quantity**
- The fluid pressure: **greater pressure → more fluid quantity**
- The needle travel adjustment: **greater needle travel → more fluid quantity**


Operating on these points it's possible to adjust the dispensed fluid quantity.

5.2 Needle travel adjustment


To adjust the needle travel, operate on the *micrometric adjustment handle* placed on the top of the valve. This handle allows to adjust the dispensed fluid quantity with a fine control.

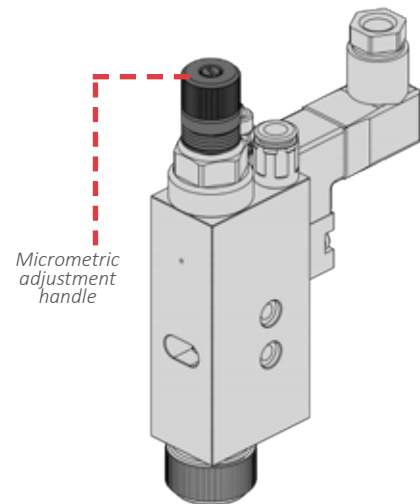

- A** Turn **counter-clockwise** to **increase** the needle travel therefore the dispensed fluid quantity.

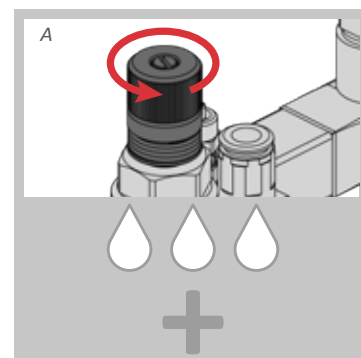

- B** Turn **clockwise** to **decrease** the needle travel therefore the dispensed fluid quantity. At the **end of the needle travel**, the valve is **completely closed**, therefore it doesn't dispense any fluid.

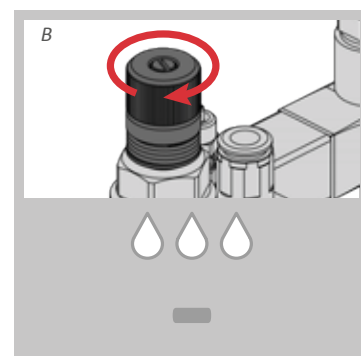

Don't tighten with excessive force the needle adjustment handle to avoid damage to the nozzle and needle.



5.3 Nebulization adjustment

The adjustment of the nebulized fluid is determined by:

- Distance between the valve and the surface to be glue: see *section 4.1 - Fixing and placement of the valve*
- Dispensed fluid quantity: see *section 5.1 - Fluid quantity adjustment*
- The pressure of nebulization air

Operating on these points it's possible to adjust the size and geometry relative the application area of the nebulized fluid.

ROUND air cap


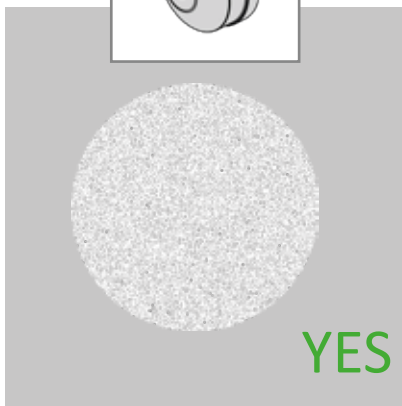
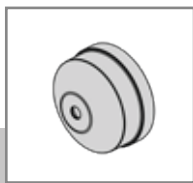


RIGHT AND OPTIMAL APPLICATION

LINEAR FAN PROFILE AND UNIFORM APPLICATION OF THE NEBULIZED FLUID

No operations needed



FLAT air cap

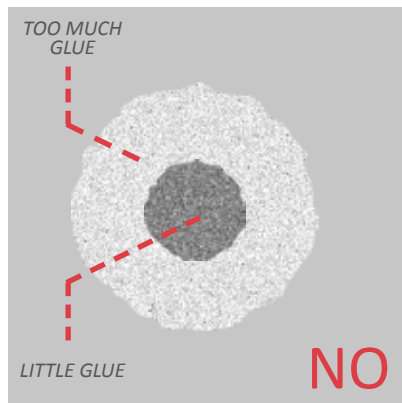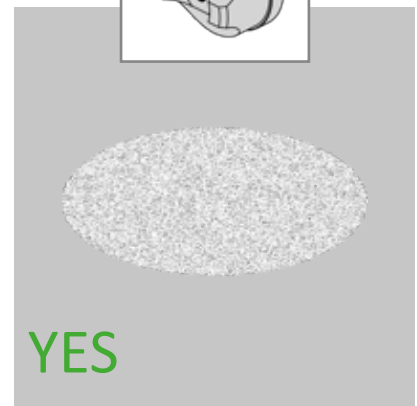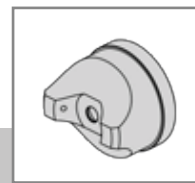

INDENTED FAN PROFILE

DEFECT→ WHAT TO DO


- The glue bounce from the paper dirtying the air cap and the nozzle → Decrease the nebulization air pressure
- Excessive glue quantity → Decrease the fluid pressure

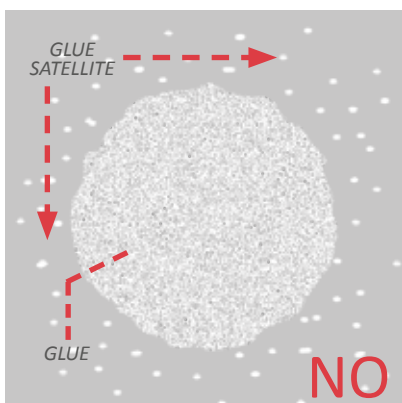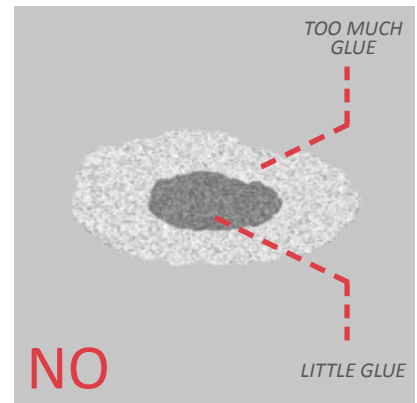

INDENTED FAN PROFILE AND APPLICATION OF THE NEBULIZED FLUID NOT UNIFORM

DEFECT→ WHAT TO DO

- Presence of glue satellite → Increase the nebulization air pressure
- Low quantity of glue → Increase the fluid pressure
- Presence of impurities or lumps inside the glue → Clean the glue filter

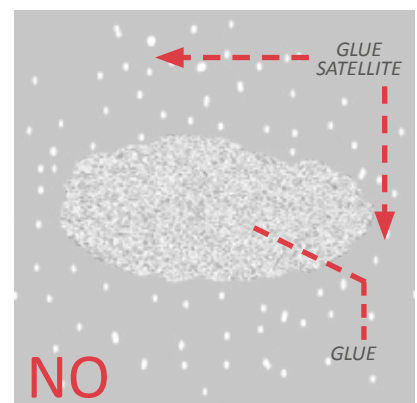

6 MAINTENANCE

6.1 General norms

The *electropneumatic valve MZS*, thanks to the construction methods and employed materials, is easy to maintain. A minimal, simple, accurate and constant maintenance allows a long-lasting and regular functioning of the valve, keeping unchanged its performance.



- For the general cleaning of the valve **don't use** metallic, sharp or pointed objects. Use only soft brushes or cotton rags.
- All the maintenance works on the valve **must be performed by qualified personnel** and after the supply pressure system has been discharged
- For the nozzle cleaning **use only** cleaning needles supplied by the valve manufacturer: if you use other sharp objects the nozzle could be **damaged**
- **Use only** original spare parts
- The valve must be washed **only and exclusively** with water, especially if you need to replace the nozzle or the needle
- Every evening and if you expect a long work break put some grease on the nozzle tip

6.2 Maintenance program

	TIMING*	WHAT TO DO
1	Every day, before the start production	<ul style="list-style-type: none"> • Do a valve test • Clean the valve externally
2	Every day, at the end of production	<ul style="list-style-type: none"> • Do a valve test • Clean the valve externally • Put some grease on the nozzle tip
3	Before a production break longer than two weeks	<ul style="list-style-type: none"> • Drain the fluid from the system and wash it completely with water • Leave the system with water inside
4	After a production break longer than two weeks	Discharge the water from the system and fill it with the adhesive fluid
5	Every month or after 2000 working hours	As point 3 and 4
6	Every year or after 4000 working hours	<ul style="list-style-type: none"> • As point 3 and 4 • Replace possible worn parts

*Approximate values that can change depending on the type of glue, adhesive or fluid used.
For the use of special fluid we recommend to contact the Zator company for any questions.


6.3 Cleaning and/or replacement of the nozzle

Before you disassembling, cleaning or replacing the nozzle the following steps **must be done**:


- Wash the valve with water
- **Discharge the pressure from the supply system**

Then proceed as follows:


- 1 Unscrew the *air cap nut* and pull out the *air cap**;

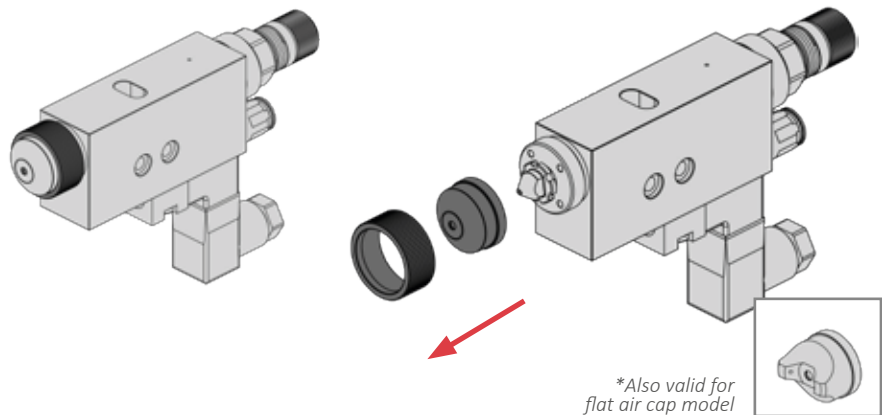

- 2 Loosen the needle adjustment operating on the *micrometric adjustment handle* (see section 5.2 - *Needle travel adjustment*), by turning it counter-clockwise until it doesn't resist anymore;

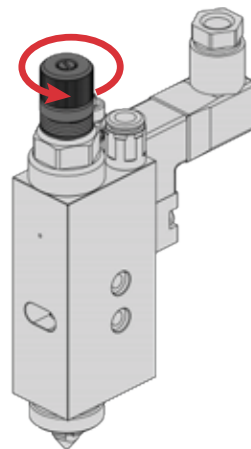


- 3 Unscrew the *nozzle* with a 6mm wrench;

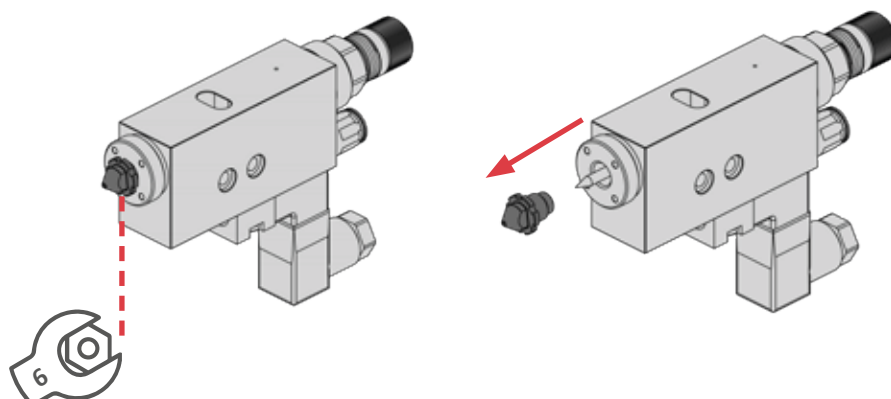


After removing the nozzle, to clean it:


- 4 Put the *nozzle* under running water then blow it with compressed air and clean the *nozzle* hole with the *cleaning needle*;
- 5 Repeat the step until you have removed all the impurities inside and outside the *nozzle*;

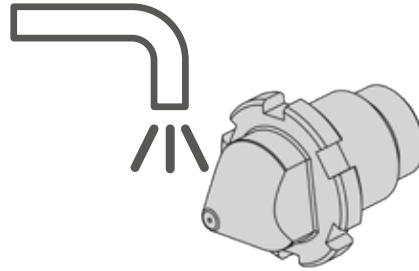

- 6 Screw the *nozzle* with a 6mm wrench;

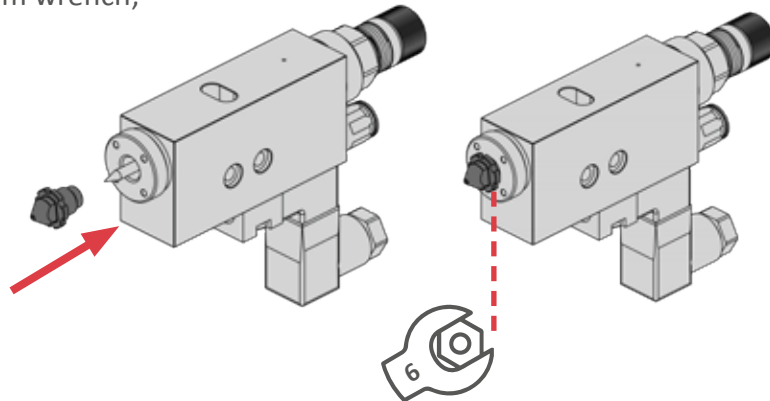

- 7 Finally position the *air cap** and screw the *air cap nut*.

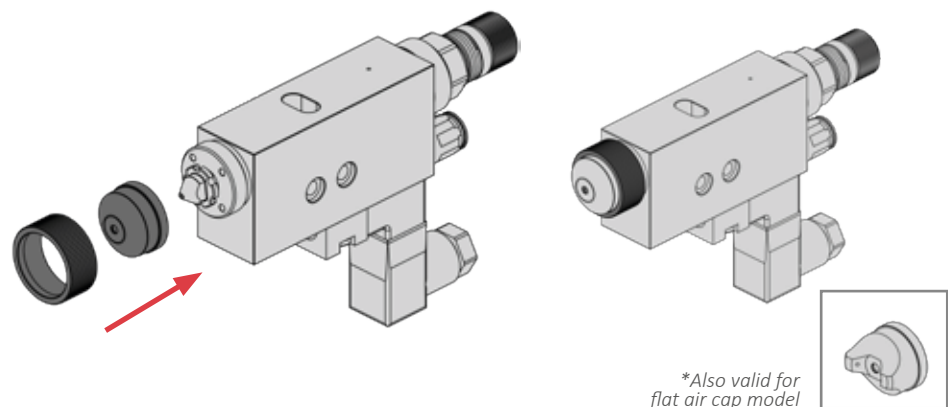


6.4 Valve disassembly

Before you disassembling the valve the following steps **must be done**:


- Wash the valve with water
- **Discharge the pressure from the supply system**

Then proceed as follows:


- 1 Unscrew the solenoid valve connector screw and then pull out the *solenoid valve connector*;

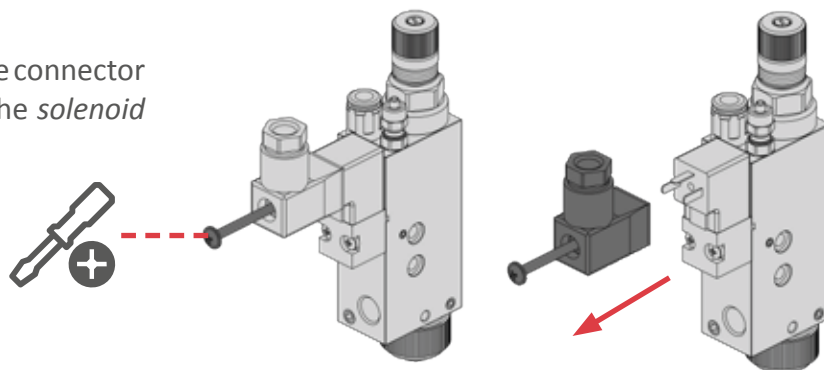


- 2 Unscrew the *fixing screws* of the solenoid valve ;

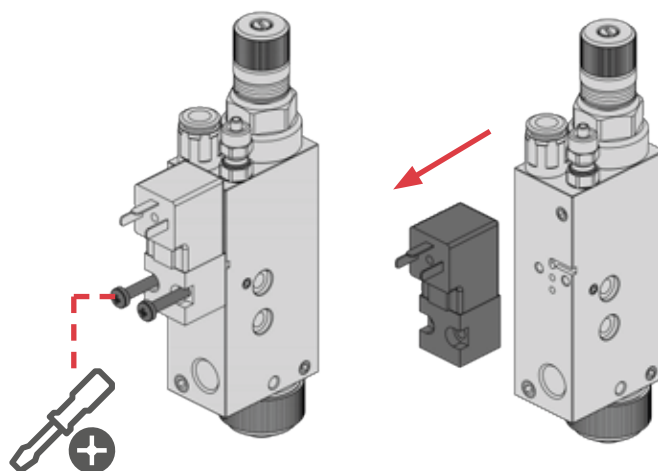


- 3 Unscrew the *air cap nut* and pull out the *air cap**;

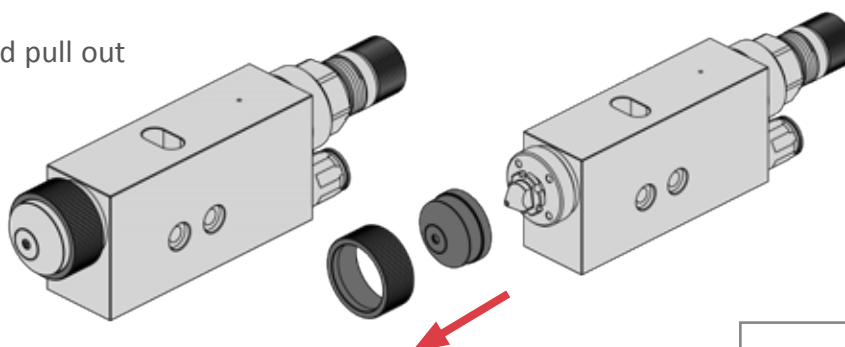


*Also valid for
flat air cap model

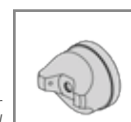


- 4 Loosen the needle adjustment operating on the *micrometric adjustment handle* (see section 5.2 - *Needle travel adjustment*), by turning it counter-clockwise until it doesn't resist anymore;

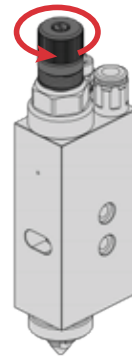


- 5 Unscrew the *nozzle* with a 6mm wrench;

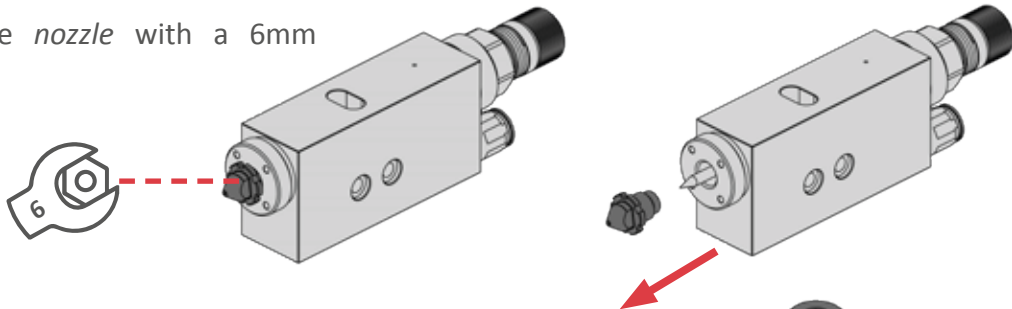


- 6 Unscrew the *adjustment block* with a 17mm wrench;

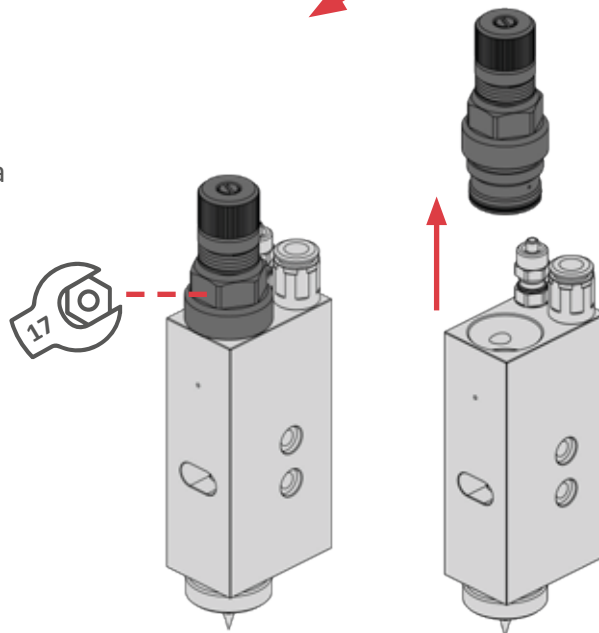


- 7 Unscrew the *air connection (drive and nebulization)* with a 11mm and a 9mm wrench;

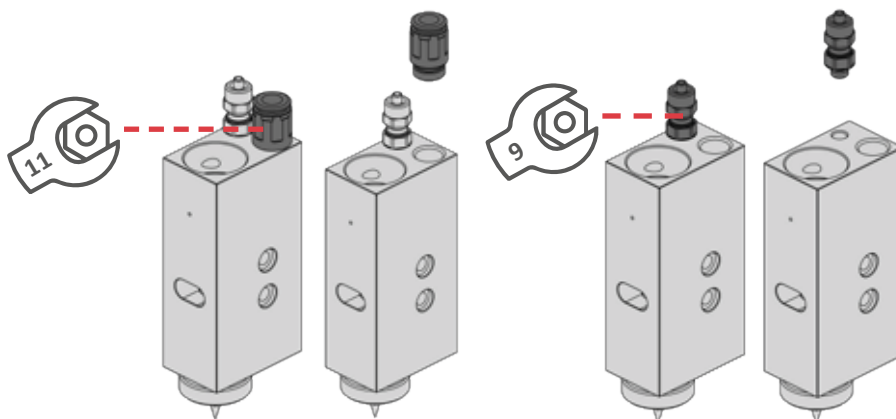


- 8 Pull out the *needle* with the help of a smooth pliers. Check the wear of the needle *O-rings* and if it is necessary, replace it;

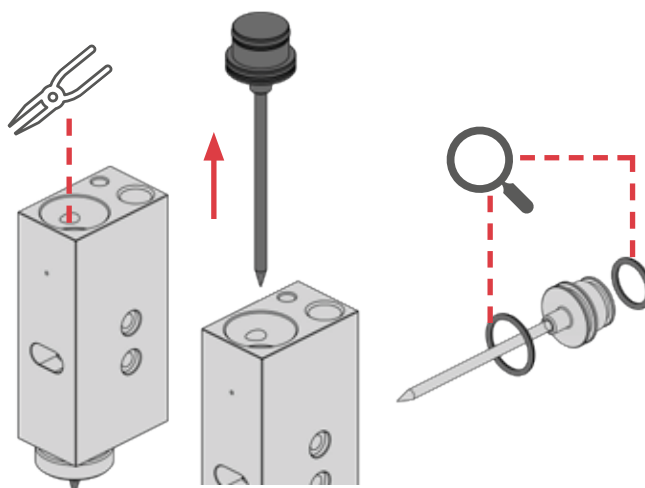


- 9 Unscrew the *lock bush* with tubular spanner, then remove it from the valve body;

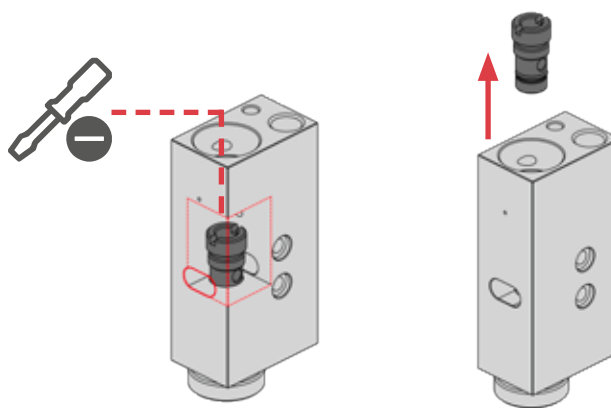

- 10 Check the wear of the lock bush *O-ring* (POS. 11-12-13) and of the *gasket* (POS. 14) and, if it is necessary, replace it. Always grease* the new O-rings before assembling them;

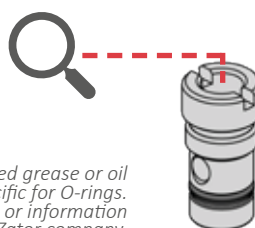

*Use silicon-based grease or oil specific for O-rings.
For any questions or information contact the Zator company.

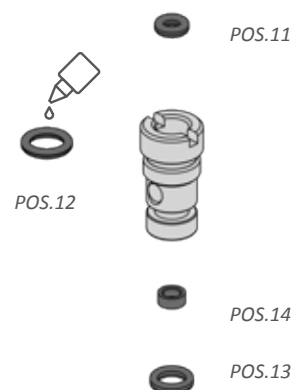

6.7 Valve assembly

Before to assembling the valve the following steps **must be done**:

- Remove the residual glue from the valve using a wet rag or soft brush
- Clean the nozzle and if it is necessary put it under running water then blow it with compressed air and clean the nozzle hole with the cleaning needle
- Check the wear of the O-rings and if it is necessary replace it
- Before the assembly always grease the O-rings

Then proceed as follows:


- 1 Insert the *gasket* (POS. 14) and the *O-ring* (POS. 11-12-13) in the *lock bush*. Always grease* the new O-rings before assembling them;

**Use silicon-based grease or oil specific for O-rings.
For any questions or information contact the Zator company.*

- 2 Insert the *lock bush* inside the valve body, then screw it with a tubular spanner;

- 3 Insert the *needle complete** until it stops;




- 4 Screw the *air connections* with a 11mm and 9mm wrench;

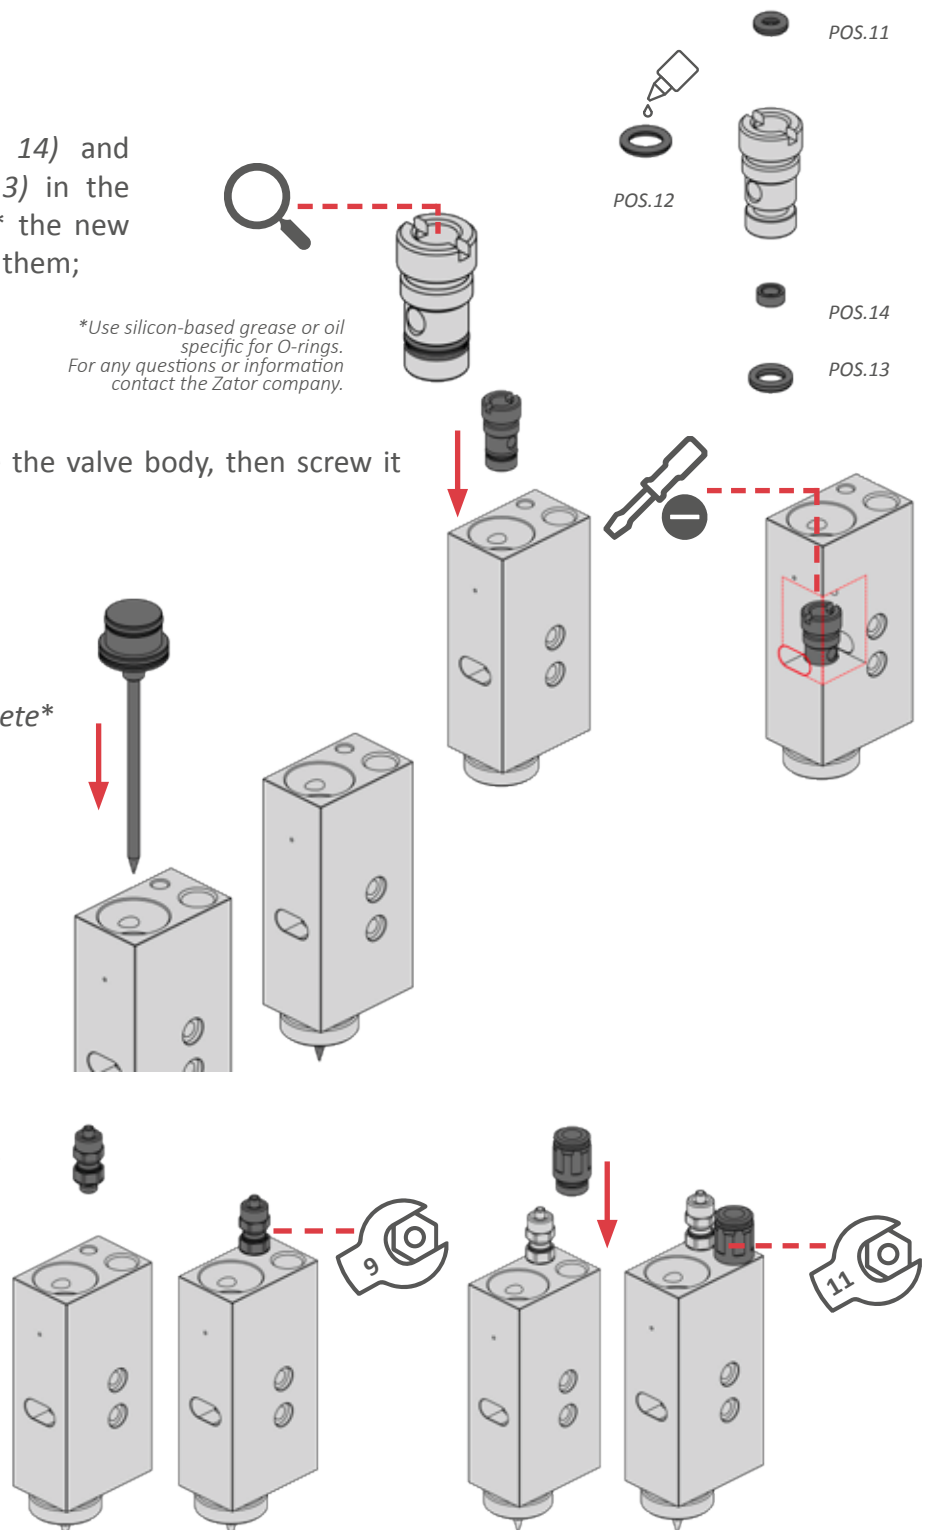


- 5 Screw* the *adjustment block* in the valve body with a 17mm wrench;




*Pay attention that the adjustment block is not tilted during the screwing to avoid damage to the thread.

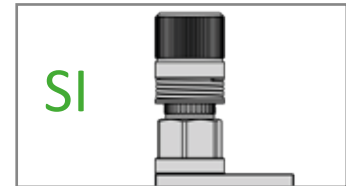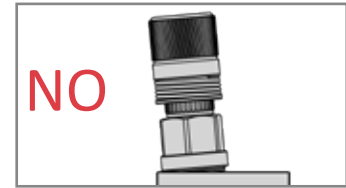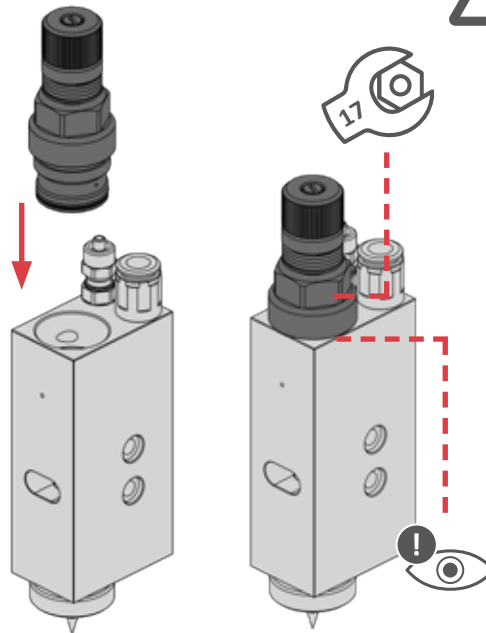



- 6 Screw** the *nozzle* with a 6mm wrench;

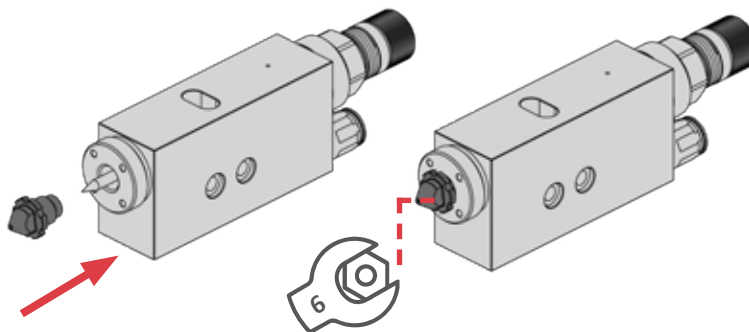

**Before screwing the nozzle, check that the micrometric adjustment handle is completely loosened to avoid damage to the nozzle and needle. To loosen the micrometric adjustment handle, turn it counter-clockwise until it doesn't resist anymore.

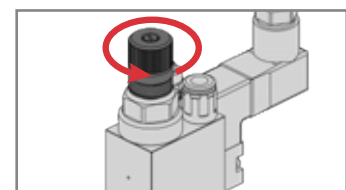


 - 7 Place the air cap* and screw the air cap nut;

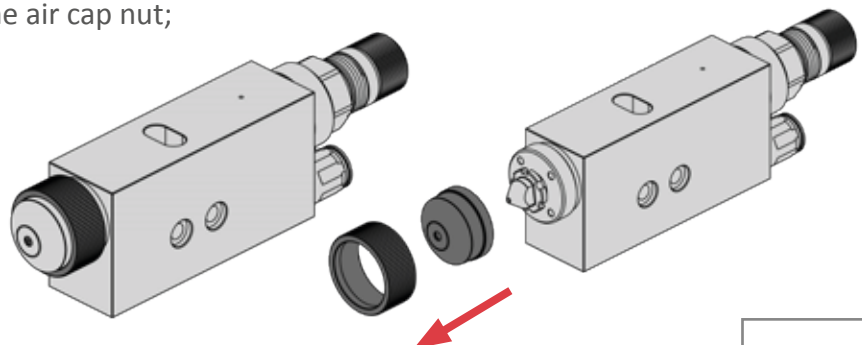


*Also valid for flat air cap model

- 8 Screw the solenoid valve mounting screws;

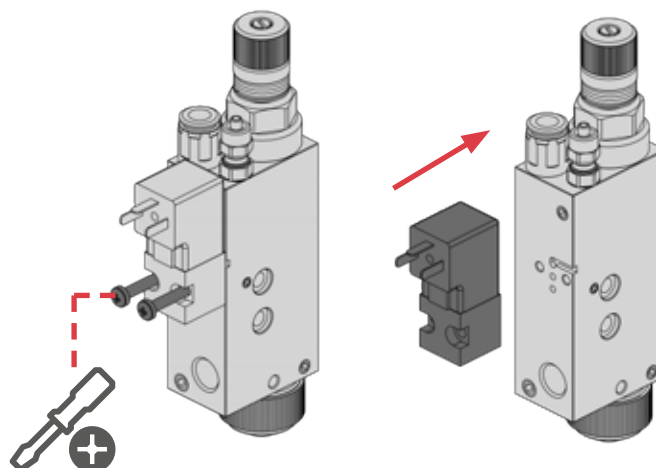

- 9 Insert the *solenoid valve connector* and finally screw the *solenoid valve connector screw*.

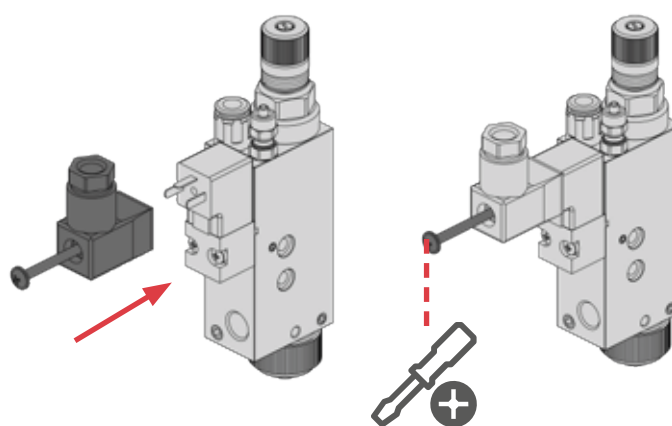

7 TROUBLE SHOOTING



CAUTION: the trouble shooting **must be performed only by qualified personnel** observing the safety norms.

TROUBLE	POSSIBLE CAUSE	WHAT TO DO
No or little quantity of dispensed fluid	The valve doesn't receive any signal	<ul style="list-style-type: none"> Check the drive of the valve (solenoid valve); Make a manual test
	The pressure of the fluid is low or missing	Check the supply pressure
	The nozzle is clogged	Unscrew and clean the nozzle
	The filter is dirty (If in use)	Wash or replace the filter
	Bent pipe	Check the condition of the supply pipe
	No or weak drive pressure	Check the drive air pressure (min. 5 bar)
	Residual glue into the system	Wash the complete system
Leak of fluid from the lock bush	O-ring or gasket inside the valve body is damaged	Replace the O-ring (POS.11-12-13) or the gasket (POS. 14)
Nozzle drips fluid even if the valve is not activated	Presence of dirt inside the nozzle	Clean or replace the nozzle
The valve is activated with a lag	No or weak drive pressure	Check the drive air pressure (min. 5 bar)
	Piston O-ring is damaged	Replace the piston O-ring (POS.7-9)
Irregular fluid nebulization	No or weak nebulization pressure	Check the nebulization air pressure (0,5÷2,5 bar)
	Presence of grime inside the air cap	Clean the air cap



8 MODELS

code	description	€
C3451XX00	Spray valve MZS1XXSRRM round cap 24 V	
<i>Replace XX value with nozzle diameter desired</i> <i>Available nozzle diameters from 0,3 - 0,5 - 0,8 - 1,0 - 1,5 mm</i>		



code	description	€
C3454XX00	Spray valve MZS1XXSFRM flat cap 24 V	
<i>Replace XX value with nozzle diameter desired</i> <i>Available nozzle diameters from 0,3 - 0,5 - 0,8 - 1,0 - 1,5 mm</i>		




available optionals

code	description	€
PDG00100	Nebulization air control unit	

9 PARTS LIST


pos.	code	q.ty	description
1	C34000001	1	Micrometric adjustment complete
2	C34000004	1	Micrometric adjustment knob
3	C34000002	1	Micrometric adjustment block
4	RNG150X10E	1	O-ring ¹
5	H83100108	1	Adjustment circlip
6	CCS000400	1	Spring
7	RNG000013E	3	O-ring ¹
8	H83100109	1	Adjustment piston
9	RNG000015E	1	O-ring ¹
10	H841303XX	1	Needle
11	RNG000006E	1	O-ring ¹
12	RNG000010E	1	O-ring ¹
13	RNG000008E	1	O-ring ¹
14	SHS30790T	1	Gasket ¹
15	H83100104	1	Lock bush
16	RRAB0252	1	Operating air fitting
17	RRBZ1052	1	Atomizing air fitting
18	C34400000	1	Valve body
19	ELT000321	1	Solenoid valve 24VDC
20	CNN200F01	1	Solenoid valve connector
21	SC11030161	2	Solenoid valve screw
22	H857221XX	1	Nozzle
<i>Replace XX value with nozzle diameter desired Available nozzle diameters from 0,3 - 0,5 - 0,8 - 1,0 - 1,5 mm</i>			
23	H85792110	1	Air cap round 0,3 - 1,0 mm
	H85792115	1	Air cap round 1,5 mm
24	H85792210	1	Air cap flat 0,3 - 1,0 mm
	H85792215	1	Air cap flat 1,5 mm
25	H85792001	1	Air cap nut
	KG0000300	1	Gasket kit ¹

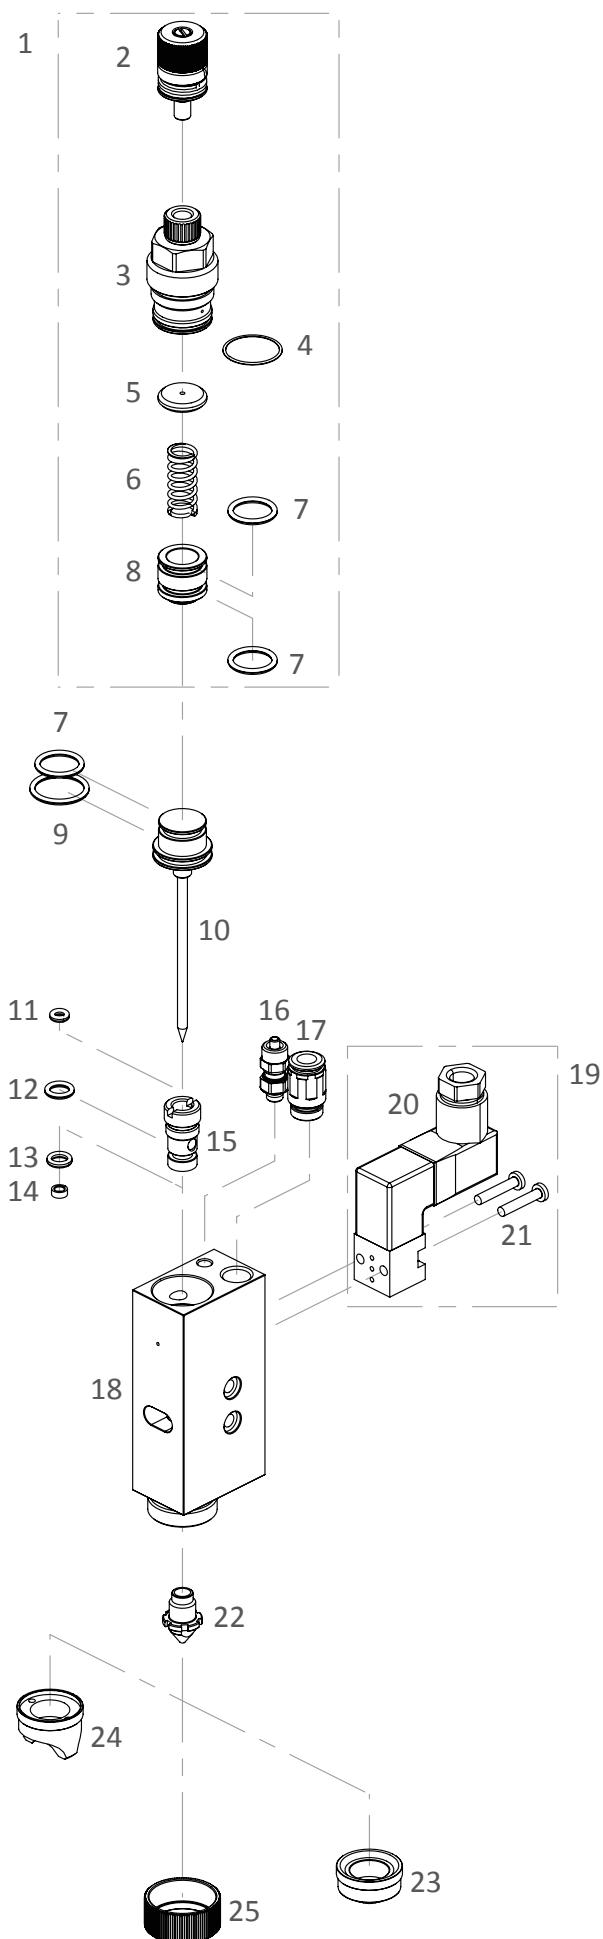


The images in this document are considered for illustration only. The company reserves the right for any changes without notice. Names, trademarks and logos are property of the author.

10 DIMENSIONS

MZS1XXSRRM

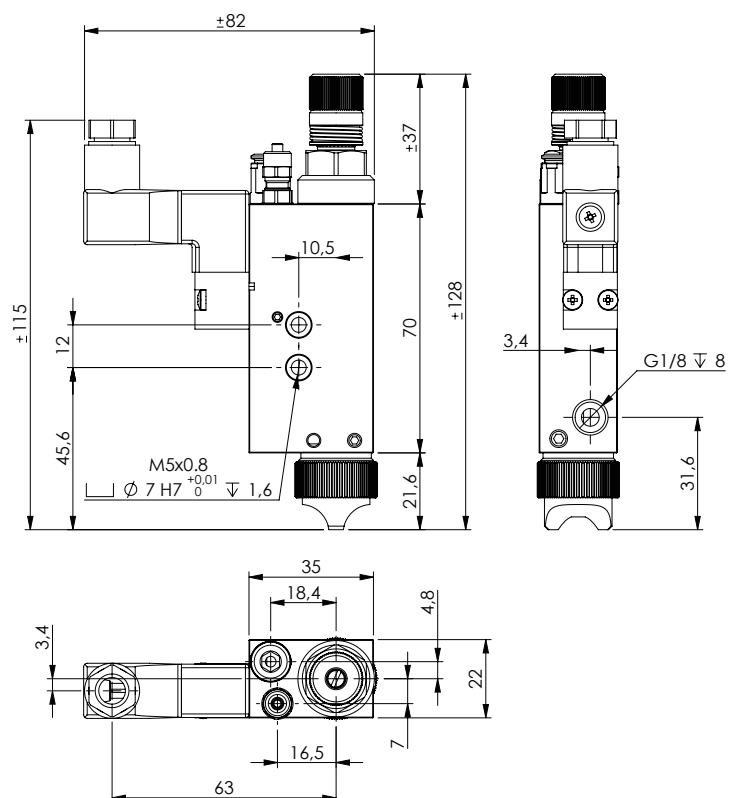

MZS1XXSFRM

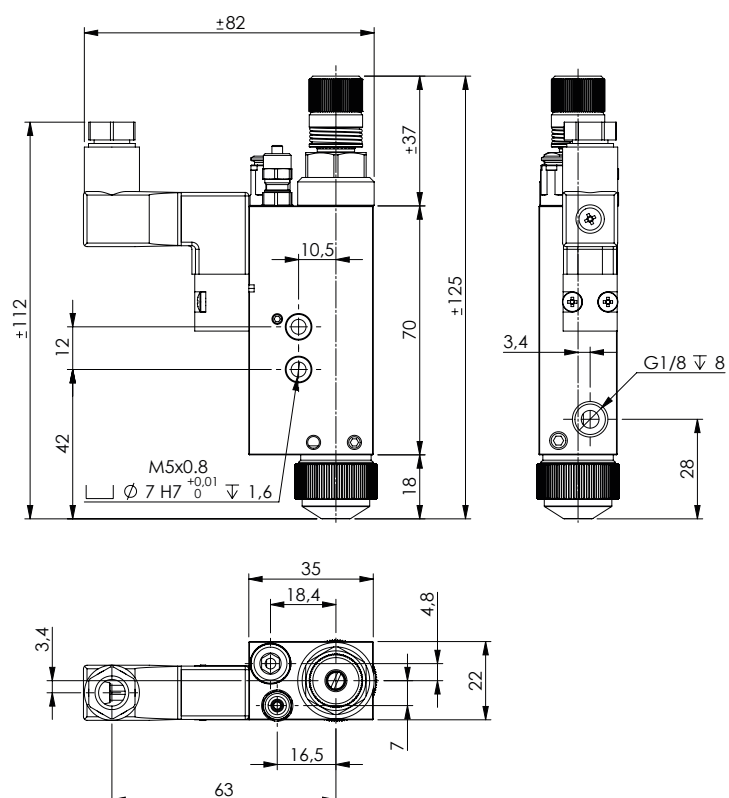

ZATOR SRL

Via Galvani, 11
20095 Cusano Milanino (MI)
Italy

Tel. +39 02 66403235

Fax +39 02 66403215

info@zator.it

www.zator.it

