


DLK22LT-LC

electromagnetic valve

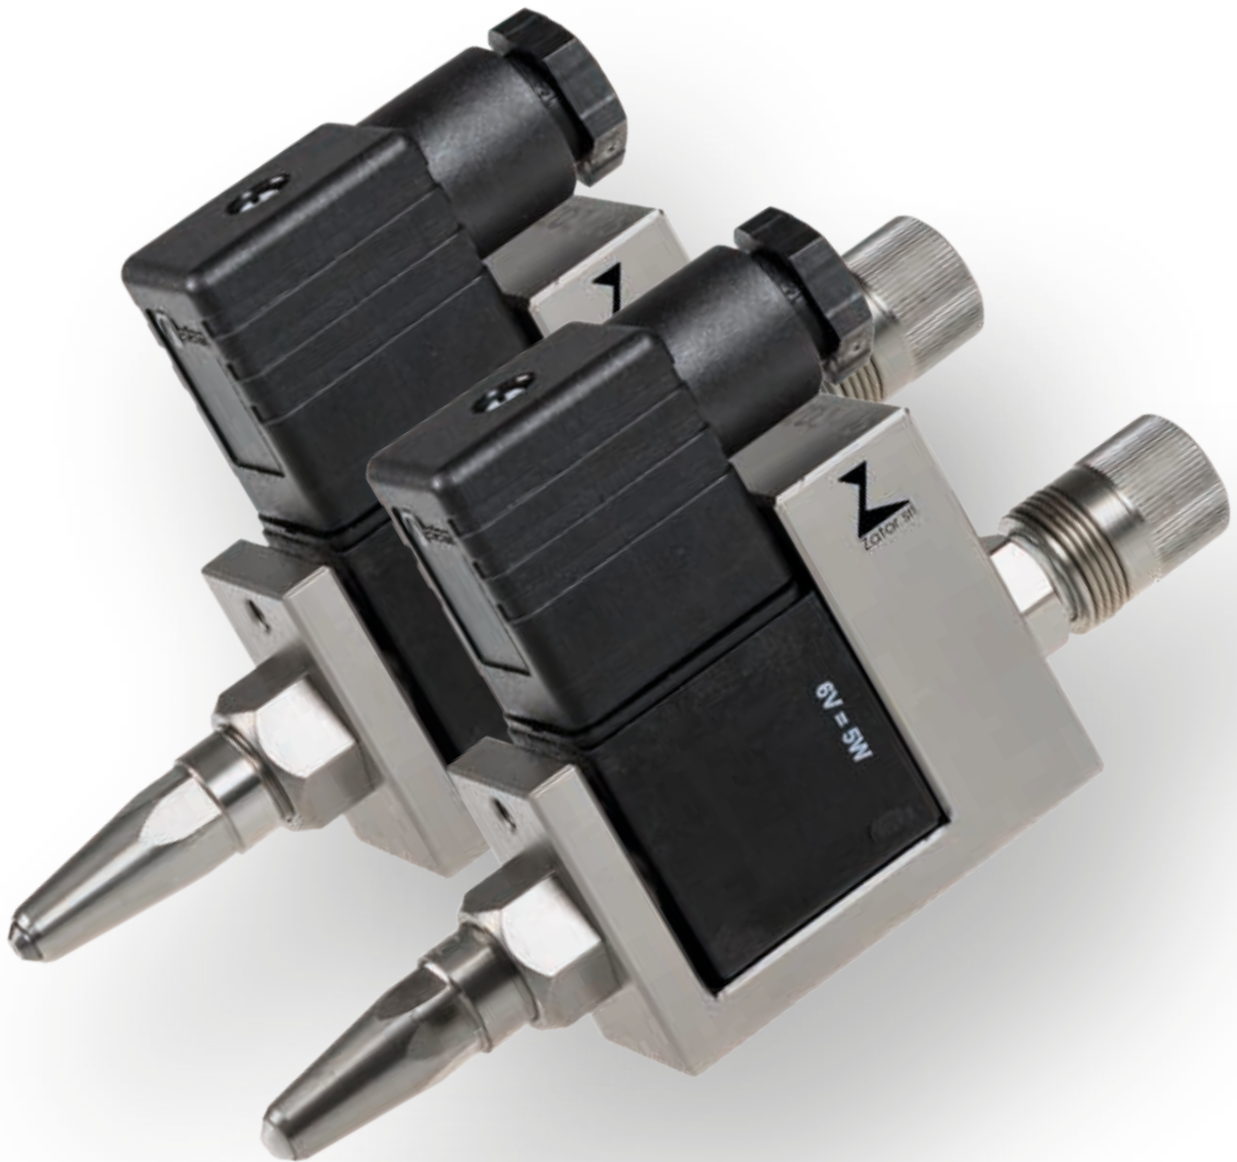

Zator
gluing solutions

USER AND
MAINTENANCE
MANUAL





ZATOR SRL

Via Galvani, 11
20095 Cusano Milanino (MI)
Italy

Tel. +39 02 66403235

Fax +39 02 66403215

info@zator.it

www.zator.it



UE Declaration of Conformity

Manufacturer:

ZATOR Srl
Via Galvani 11
20095 Cusano Milanino (MI)
Italy
Tel.+39 02 66403235
Fax +39 02 66403215
Email: info@zator.it

DECLARES

Under its responsibility that the electromagnetic valve:

Model	DLK22LT-LC	Year of manufacture	
-------	------------	---------------------	--

Is in compliance with UE directives, with relation to the following ones and/or parts of them applicable to this product:

- Directive 2006/42/CE of European Parliament and Council of the 17th of May 2006 regarding to machines and that modify directive 95/16/CE (recasting)
- Directive 2014/35/UE of European Parliament and Council of the 26th of february 2014 regarding the harmonization of the UE Countries laws about the the making available on the market of electrical equipment intended to be used within certain voltage limits (recasting)
- Directive 2014/30/UE of European Parliament and Council of the 26th February 2014 regarding the harmonization of the UE Countries laws about the electromagnetic compatibility (recasting)

Cusano Milanino


Legal Representative


ZATOR S.r.l.

Index

1	GENERAL INFORMATION	8
1.1	Introduction	8
1.2	Warranty	9
1.3	Warranty restrictions	10
1.4	Maintenance service request	11
1.5	Spare parts request	11
2	SAFETY RULES AND REGULATIONS	12
2.1	Safety and environment general informations	13
2.2	P.P.E. Personal protective equipment	13
2.3	Risks, protections, warnings and cautions	14
2.3.1	General safety	14
2.3.2	Unavoidable dangers and risks unavoidable	15
2.3.3	Safety devices adopted	16
2.3.4	More general safety precautions	16
2.4	Environmental condition	17
2.5	Installation - General instructions	18
2.6	Use of adhesives, glues or other fluids	19
3	TECHNICAL DESCRIPTION	20
3.1	Valve functions	20
3.2	Technical data	20
3.3	Functioning description	21
4	INSTALLATION	22
4.1	Fixing of the valve	22
4.2	Contact-less gluing application	22
4.3	Contact gluing application	23
4.4	Fluid supply connection	23
4.5	Electrical connection	23
5	VALVE ADJUSTMENTS	24
5.1	Fluid quantity adjustment	24
5.2	Needle travel adjustment	24

6	MAINTENANCE	25
6.1	General norms	25
6.2	Maintenance program	25
6.3	Cleaning and/or replacement of the nozzle	26
6.4	Valve disassembly	27
6.5	Needle disassembly	29
6.6	Needle assembly	29
6.7	Valve assembly	30
7	TROUBLE SHOOTING	32
8	MODELS	33
9	PARTS LIST	34
10	DIMENSIONS	36

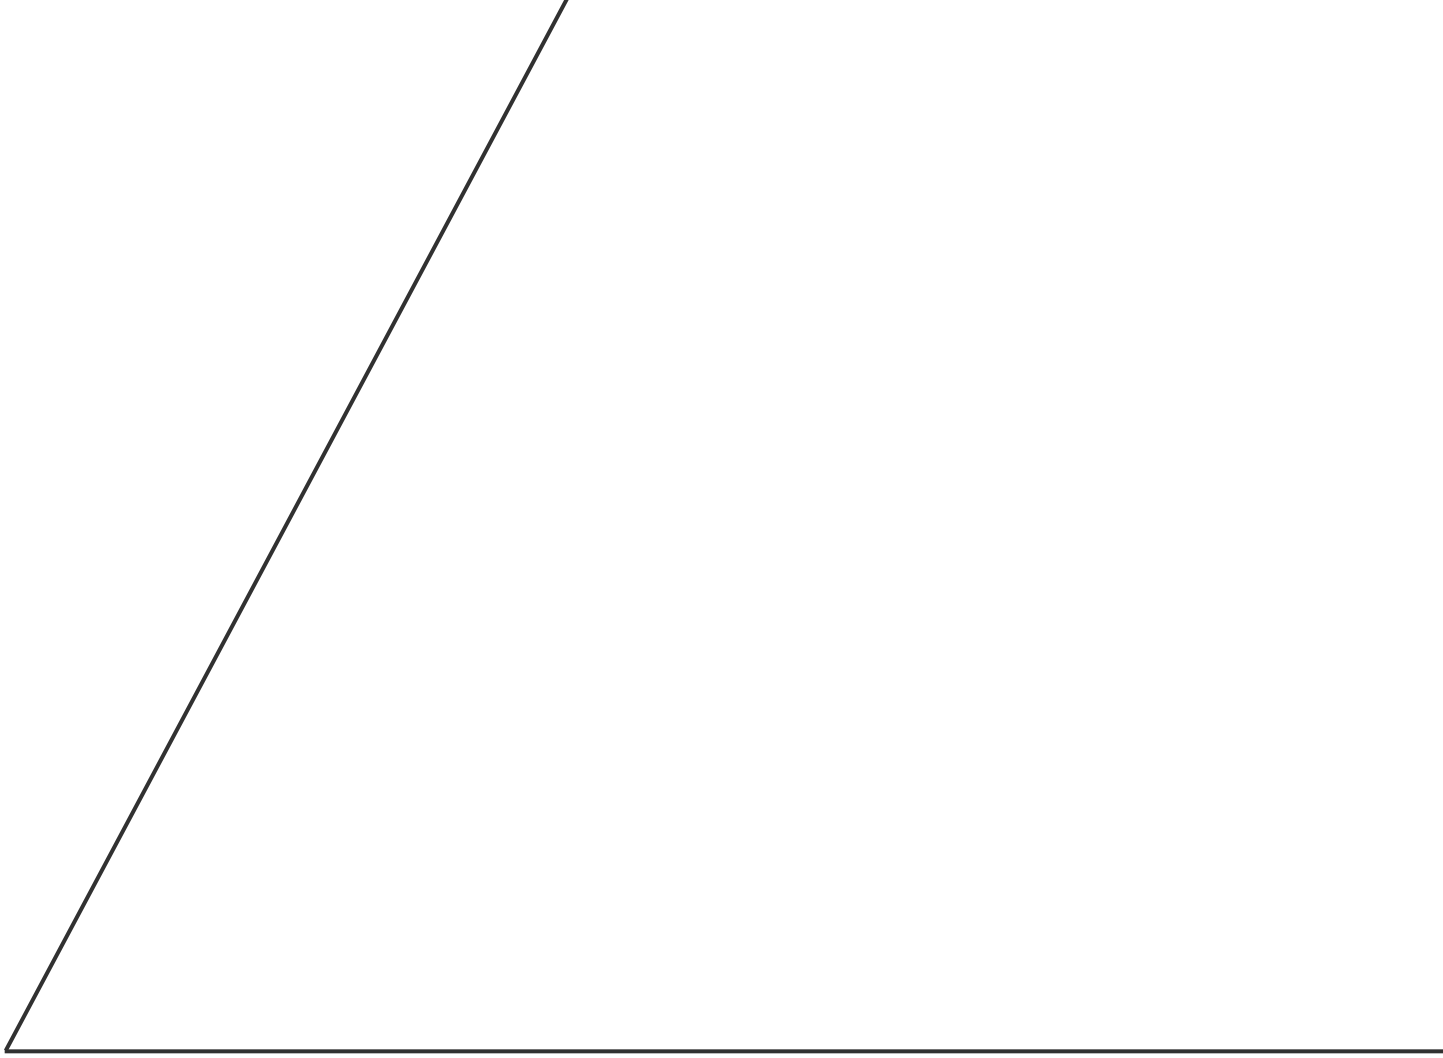

USER AND MAINTENANCE MANUAL

electromagnetic valve DLK22LT-LC

1 GENERAL INFORMATION

1.1 Introduction

This manual is an essential part of the electromagnetic valve and is destined to trained and well-informed personnel, which is aware of the machine performance at the risk conditions to which it may be exposed. This document supposes that in the plants where the valve is destined, are complied the present norms of safety and hygiene of the work.

Zator Srl won't be liable for actions or improper connections made by unqualified and unformed personnel.

Instructions, drawings and documentation contained in this manual are of reserved technical disposition, only for Zator Srl property and may be not reproduced in any way, neither in full or partially reproduction; not translated into another language, or transmitted in any electronic or mechanical means or form, without written permission of Zator Srl.

The data and values expressed in the manual are approximate and variable depending on fluids, applications and methods of use.

Zator Srl doesn't assume any responsibility regarding the accuracy of the contents of this manual.

The drawings and technical data in this document is updated to the date of their publication and Zator Srl reserves the right to change, without notice, the contents of this manual.

It is therefore forbidden for Technician and Operators of the maintenance to use this manual for different purposes from those relatives to the care and maintenance of equipment in question.

This manual includes the installation, use and maintenance norms of the electromagnetic valve in safety.

Test in production workshop

The manufacturer guarantees the valve, that this document refers, has been inspected and tested by his production workshop.

"At term of law we reserve the property of the data and technical information with the prohibition of play, communicate to third parties or use them anyway for any other executive purpose and what is shown in this document is the property of the Manufacturer"



1.2 Warranty

This warranty is valid for 12 months from the actual delivery.

During the warranty period Zator Srl undertakes to remove in the necessary time the obvious faults and flaws of material and/or production, on condition that machine or equipment has been used properly, according to the best rules of behaviour and maintenance provided in this manual.

The flawed parts under warranty are fixed or replaced free from Zator Srl in the time compatibly necessary, understood that the Zator Srl is exempted from each responsibility for any title, while the buyer give up to ask damages or costs, including those resulting from the temporary not use of the purchased machinery for all the time is necessary to put it back in efficiency; The transport and/or the forwarding costs, the outward and the return trip costs relative to the operation by the Zator's technicians in the Buyer address are always on charge of the buyer.

The labor costs relative to the operation of the Zator's technicians in the Buyer address for the removal of flawed parts under warranty, are on charge of Zator Srl, except these cases when the nature of the flaw can be easily removed on place by the Buyer.

This commitment of Zator Srl excludes each other warranty effects provided by the law.

The warranty for the replaced or repaired spare parts of the electromagnetic valve finishes the same day of the warranty expiration date of the electromagnetic valve, the replaced part warranty however doesn't has lifetime less than three months after its installation.

Replaced parts during the warranty period by the seller are free acquired in the same place with new parts.

Are excluded from the warranty all the tools and consumable materials, possibly supplied by Zator Srl with the machine.

It are excluded and renounced by the buyer every pretensions of items/people damages reimbursement on charge to Zator Srl, for any titles, even if the damages were depending from manufacture or material flaws. It's of equal excluded and given up any reimbursement for people and/or items damages depending on the practise of the electromagnetic valve. Parts replaced free remain of Zator Srl property.

Elapsed the warranty period every operation will be on charge to the buyer.

Application fields

- Packaging machines
- Paper converting industry
- Printing machines
- Tobacco industry
- Assembly industry
- Food industry

Condemnation of conformity flaw - Goods reception

The original configuration of the electromagnetic valve never must be changed.

On goods reception, check that:

- The packaging is intact
- The exact correspondence of the commissioned material

In case of damages or wrong delivery contact immediately Zator Srl.

The buyer, on penalty of warranty decadence, must report in writing the flaw conformity or fault of the electromagnetic valve to the seller, specifying in detail the nature, within eight days from their discovery. In no case the condemnation of conformity flaw or fault may be validly made after the expiration date of the warranty terms.

Also the buyer decays from the warranty if doesn't allow each reasonable control that the seller requires. It's excluded from this warranty the most damage caused to the machine by the failure timely condemnation to the seller of a conformity flaw or fault of the the electromagnetic valve.

1.3 Warranty restrictions

This warranty is only valid for products of new construction.

This warranty is limited to the reparation or replacement, by the seller, of each parts of the machine or supplied material that results flawed, after checking the existence of the flaw.

In no case the seller will be liable for every consequential or indirect flaws or otherwise derived from production cycle interruption or machine stoppage.

The seller is not liable for flaws of the electromagnetic valve derived from the use of devices, equipments, etc. that are enquired and provided by the customer and installed on the machine to change its use compared to the original design.

The seller is not liable for every conformity flaws of the electromagnetic valve or faults owed for the normal wear of those parts that, by their nature, are subject to rapid and continuous wear.

The seller also is not liable for damages resulting from improper use of the equipment and from the non-observance of the norms expected for the execution of the ordinary periodic maintenance.

The seller is not liable for conformity flaws of the electromagnetic valve or faults that depends on changes, reparations, alterations or tampering attributed to the buyer and however non-authorized personnel of the buyer.

The costs relative to the wear materials necessary for test and restart the electromagnetic valve are on charge of the buyer.



1.4 Maintenance service request

Contact:

Technical office of Zator S.R.L.

Via Galvani 11 - 20095 Cusano Milanino (MI) - Italy
e-mail: info@zator.it www.zator.it
Tel.: +39-0266403235 Fax.: +39-0266403215

Always forward the request in writing (fax or email) and give all the information to identify the machine object of the request:

- **Model**
- **Serial number**

Please refers to the frontispiece of this manual or directly to the nameplate on-board to the machine or to the serial number of the electromagnetic valve.

1.5 Spare parts request

The customer is responsible to purchase original spare parts that guarantee him to keep efficient and safe the electromagnetic valve.

The disassembly and assembly operations must be performed according to the manufacturer's instructions.

Contact the Technical Office of Zator Srl which will give to you the specifications to do the request of the parts and will provide the information about their replacement.

To order the spare parts is necessary to report completely all identification data of the electromagnetic valve and those of spare part to be replaced.

The illustrations in this document are for example.

2 SAFETY RULES AND REGULATIONS

The electromagnetic valve DLK22LT-LC is designed and manufactured in compliance with the current safety standard. Only trained personnel is authorized to install and use the electromagnetic valve. For the electromagnetic valve DLK22LT-LC are provided only and exclusively the application fields describe in this manual. All data and parameters indicated in this manual must be respected. Any other use is considered improper.

All operations performed with the electromagnetic valve DLK22LT-LC must be carry out in compliance with the following current safety rules and regulations written in part:

1. Rules of fire prevention
2. Directive 2006/42/CE of European Parliament and Council of the 17th of May 2006 regarding to machines and that modify directive 95/16/CE (recasting)
3. Directive 2014/35/UE of European Parliament and Council of the 26th of february 2014 regarding the harmonization of the UE Countries laws about the making available on the market of electrical equipment intended to be used within certain voltage limits (recasting)
4. Directive 2014/30/UE of European Parliament and Council of the 26th February 2014 regarding the harmonization of the UE Countries laws about the electromagnetic compatibility (recasting)
5. Rule 2016/425/UE of the 9th of March 2016, about the personal protection equipment and that abrogates the directive 89/686/CEE of the Council

2.1 Safety and environment general informations

Before the start-up of the electromagnetic valve the personnel must be adequately informed and trained on its use, direction and start-up process, as well as the safety norms to be performed and also observe how it is prescribed in this document and in other documents possibly attached to the electromagnetic valve.

The employer must provide to instruct the personnel on the risks of injury, on safety devices and accident prevention general rules provided by the community directives and the legislation of the country where the electromagnetic valve is installed.



CAUTION: Always disconnect the power supply before proceed to carry out any maintenance or adjustment operations.

Discharge the fluid pressure before to proceed to carry out any maintenance or adjustment operations.

2.2 P.P.E. Personal protective equipment

For personnel who will work on the electromagnetic valve, for any functions (installation, assembly, demolition, maintenance and operation) they will be provided with appropriate P.P.E. - Personal protective equipment of type approved and certificate by C.E.:

- anti-solvent gloves
- cut resistant gloves
- masks
- coverall (no floating coverall)



CAUTION: The clothes of who will operate the electromagnetic valve for any functions must be in compliance with the essential safety requirements defined by the regulation 2016/425/UE of 9th of May 2016 and by the actual laws in the country of use.

2.3 Risks, protections, warnings and cautions

2.3.1 General safety

In accordance with the Machine Directive it means for:

DANGER ZONE = area within or near the electromagnetic valve where the presence of an exposed person make a risk to the safety and health of himself.

EXPOSED PERSON = any person that is placed entirely or partially inside a danger zone.

OPERATOR = person who is appointed to install, operate, adjust, perform ordinary maintenance and clean the machine.

All risk areas of the electromagnetic valve have been checked and consequently have been taken the necessary precautions to avoid risks to people and damage to the components of the electromagnetic valve.

Safety glossary

Intended purposes

By this term it refers to the use of the machine as described by the manufacturer.

For “intended purposes” also refers to the use of the unit through its design, its construction and function.

Secondary risks

Secondary risk are unavoidable despite all the preventive measures that are taken.

Competent personnel

A person is competent when it acquired sufficient knowledge in a specific field both through the professional instruction and with the experience. A competent person must get to know with the specific norms for the safety on work and for the accident prevention and generally with the technical knowledge rules.

Trained personnel

A person is trained when informed by a competent person about the activities it must perform and the risks relative to improper behaviour and, if necessary, it has received the required training. Also a trained person must be informed about the safety devices and protective measures.

Skilled personnel

A skilled person is a competent one or sufficiently trained.

The operator must be informed of the position and operation of all commands and features of the electromagnetic valve.

The maintenance and start-up operations must be performed by qualified technicians after properly setting up the electromagnetic valve.

The unauthorized tampering or replacement of one or more product parts, the adoption of accessories that modify the original use of the electromagnetic valve and the purpose of different consumer product from those recommended in this manual, can become a cause of injury risks.

The protective devices must not be removed or tampered for the risk to reduce the accident prevention features of our products.

To highlight particular situations for the safety of the instrument, are used the following graphic symbols:



CAUTION and/or DANGER – Accident prevention rules for the operator



R. R. – RESIDUAL RISKS

WARNING - There is the possibility to damage the machine and/or its components

PRECAUTION - Further information about the operation in progress

NOTE - Provides useful information

2.3.2 Unavoidable dangers and risks unavoidable

On the electromagnetic valve also equipped with protection systems remain the following **R. R. RESIDUAL RISKS**:

A - Danger due to electricity in general

B - Danger due to inhalation of dangerous vapours to health and fire danger

C - Danger due to problems/malfunctions of the electromagnetic valve

This can lead an excessive increase of dispensing of glue as well as a fire danger or dangers due to inhalation of dangerous vapours to health.

D - Risk due to the projection of fluids under pressure

In case of improper maintenance of the hydraulic system parts.

E - Risk of fire

Prohibition of smoking and/or high temperature objects near the electromagnetic valve.

2.3.3 Safety devices adopted

In order to safeguard the health and security of the exposed people, the electromagnetic valve is equipped with:

- Fixed guards: removable only by tools
- Mobile guards: depending on the model of electromagnetic valve

The electromagnetic valve can be equipped with area delimiters that prevent operator access to dangerous areas (see **R.R.**).

2.3.4 More general safety precautions



CAUTION: The maintenance operations must be peremptorily carry out by qualified and authorized personnel, only and exclusively with electromagnetic valve turned off: power switch in “OFF” position.

Make sure the passages around the electromagnetic valve are not hindered by misplaced cables and dangerous for personnel.

The user must always put available to the operators, in the areas that require it, safety goggles, gloves, and any other necessary protections; it must also make sure that these safeguards are being used.

The areas that require the use of protective clothing must be marked with warning signs and pictograms indicating the residual risk.



CAUTION: is ABSOLUTELY FORBIDDEN to tamper or remove the plates and the protections on the electromagnetic valve.

The manufacturer declines all responsibility for the safety of the electromagnetic valve in case of omitted observance of the prohibition.

CE norms signage: examples of danger symbols



Danger



High voltage



Flammable



P
Toxic



C
Corrosive



O
Combustive
agent

2.4 Environmental condition

Operating environmental conditions

The electromagnetic valve is designed to operate in a closed local, protected from the atmospheric agents, with all the safety requirements resulting from the laws in force.

Waste disposal

The buyer is responsible to follow the correct process and the norms in force in the country for the disposal of waste and residual material.

Disposal

The pick up of special and/or toxic-noxious waste must be committed with contract to specifically authorized companies and who do the transport materially must be in ownership of the required authorizations and must be turn out to be registered in the haulers register.

It's absolutely forbidden to throw waste in the environment.

For the disposal of the packaging, the user must follow the laws in force in the country of plant installation.

Fire material

There is no fire dangers by the operation of the electromagnetic valve.



CAUTION: The customer must provide an appropriate fire-fighting system, evaluating its internal situation and respecting the laws in force.

In case of fire, disconnect immediately the power switch to interrupt the power supply.



CAUTION: explosive atmosphere

The electromagnetic valve is not designed to operate in explosive atmosphere. It is forbidden to use the machine in an explosive atmosphere, even if only partially explosive.

Lighting

The customer is responsible for ensuring an appropriate lighting of the local where the machine is installed, according to the laws in force in your country and the EU directives.

Vibrations

The electromagnetic valve doesn't make vibrations.

2.5 Installation - General instructions

Zator's products are manufactured in compliance with the laws in force during its construction.

The personnel will be trained and qualified to take advantage of the installed electromagnetic valve requirements.

The personnel must operate in a comfortable space that could be guarantee safety and hygiene for the operator.

In case of a different destination or necessity of use of the electromagnetic valve, it's appropriate to refer to the technical offices of the Zator Srl.

Goods in packaging

Outside the package are indicated all the information about the content identification and the safety movement:

- address of the sender and the addressee
- dimensions: length – width – height
- gross – net – tare weight
- annotations and pictograms (ex. brittle, handle with care, high)

CAUTION: The customer must check the condition of the goods upon its arrival.

Predispositions: choose the installation space

Without prejudice to specific dispositions, the customer will be provide to:

- Appropriate logistic arrangement for the placement and conduction of the electromagnetic valve
- Power supply, including the protective conductor usually called "GROUNDED"
- Electrical equipment arrangement and possible pneumatic system, if required
- Wear materials

For the electrical connection it is necessary to have a preferential line of power supply with the features listed in "technical features".

2.6 Use of adhesives, glues or other fluids

The use of the valve with adhesives, glues or general fluids must be respect the following basic rules.

Before use a specific type of fluid check that:

- The fluid viscosity is compatible with the features of the valve
- The characteristics of the fluid meet the desired requirements
- The datasheet of the fluid provided by the manufacturer includes all the informations about the fluid such as: viscosity, applications, gluing time (for glues or adhesives) and storage
- The storage time of the fluid has not been exceeded
- The fluid has not been exposed to temperatures near or below than zero therefore it has deteriorated
- The packaging of the fluid are sealed

For the use of **special adhesives, glues or fluids** we recommend to contact the Zator company to verify the compatibility of the application.

Before use a different type of fluid clean accurately the valve to avoid possible contamination of the new fluid.

When used water-based adhesives or glues they are easily removable with water in their liquid state. However, when they harden is more difficult to remove it. For this reason, before long stop it is recommended to wash accurately the valve. Please refer to the maintenance program shown in this manual.


3 TECHNICAL DESCRIPTION

3.1 Valve functions

The *electromagnetic valve DLK22LT - DLK22LC* has been designed and realized for its use on various kind of production machines operating at high speed: its design and versatility make it ideal for any applications that require the use of dispensing valves.

It's an high-speed dispenser of low and medium viscosity glues, adhesives and fluids (max 2500 mPas).

It can be dispense glue dots or glue lines. It is controlled by a Zator's microprocessor control or by an instrument of external control after testing and approval of Zator company. Full stainless steel valve and zero cavity long nozzle with tungsten carbide tip (LT) for abrasive fluids, or with anti-abrasive ceramic tip (LC) for "contact" application. The valve is also equipped with needle with ceramic ball and micrometric adjustment which allows a fine control of the dot and line size.

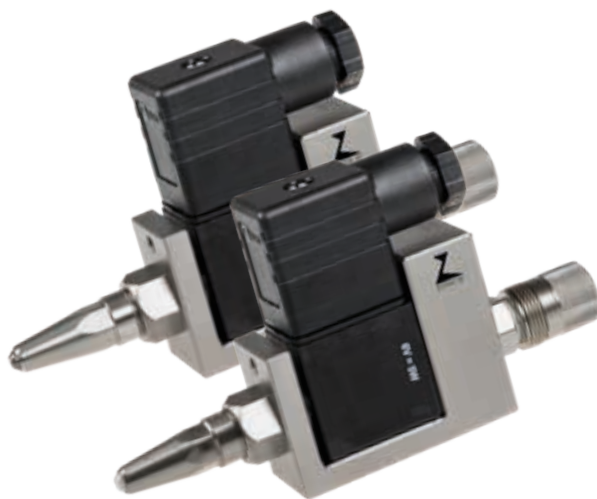

3.2 Technical data

Available nozzle diameters	from 0,2 to 1,5 mm
Valve body	stainless steel
Maximum fluid viscosity	~ 2500 mPas
Maximum working pressure	25 bar
Maximum working frequency	350 dots/sec.
Coil	6, 12 or 24 Volt
Weight	330 g



Dots and lines


fluid types

- adhesives and glues
- inks
- paints
- mastics
- low viscosity fluids

3.3 Functioning description

The valve ^{3A} is composed mainly of:

1. Nozzle
2. Needle with a ball
3. Spring
4. Guide sleeve
5. High frequency coil
6. Body valve

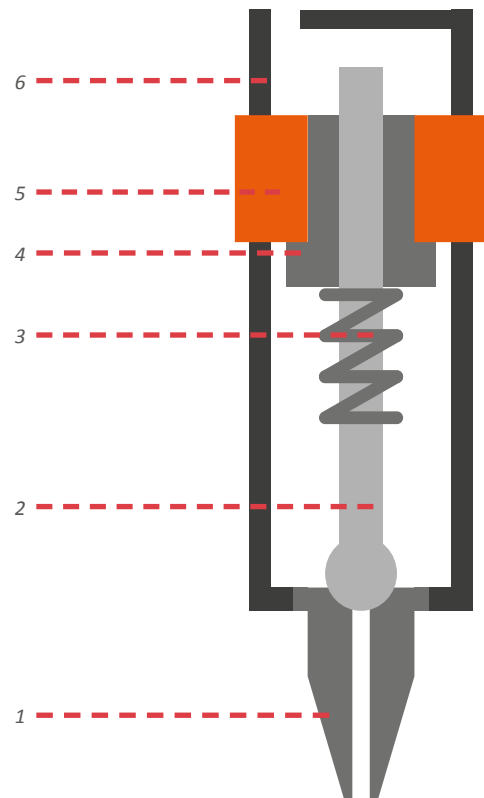


3A. Internal section diagram of the main components (for illustration only)

Functioning diagram

1 When the valve is not activated, the needle closes the nozzle seat, pushed by a spring, and stops the fluid under pressure to flow out from the nozzle hole.

2 Once the coil is activated, the needle moves back, allowing the fluid flow to come out from the nozzle. Deactivating the coil, the needle comes back to the closure position.

For the *dots application* this sequence is realized hundreds of times per second.

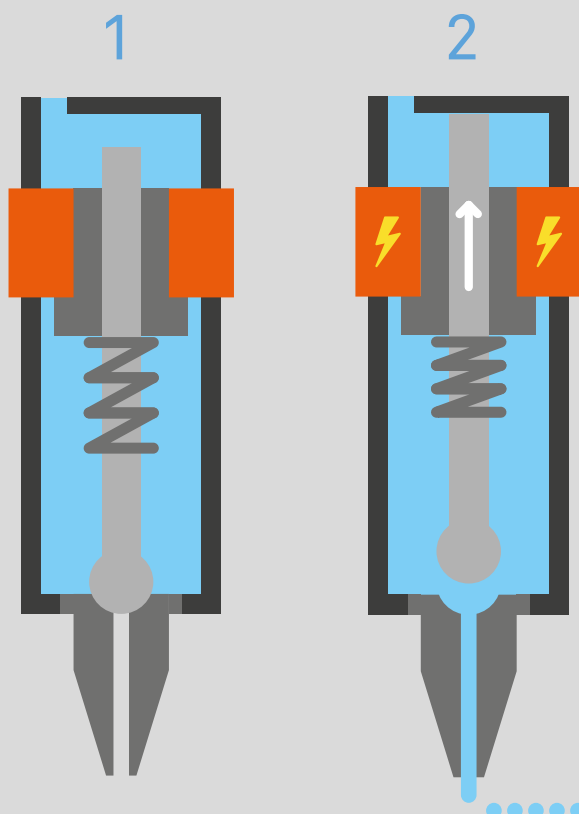

4 INSTALLATION



4.1 Fixing of the valve

The DLK22LT-LC valve must be fixed on a proper bracket thanks to the **threaded holes** (M5 dimension) machined on the valve body.

A vibration-free environment and a good accessibility for regulation, cleaning and maintenance and a good fixing of the valve to the support/bracket and of the latter to the machine must be guaranteed.



The maximum fixing depth of the fixing screws in the body valve is 6 mm. To avoid coil damage don't exceed to this measure.

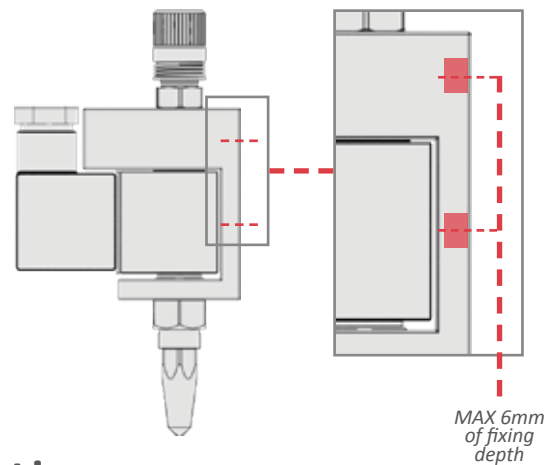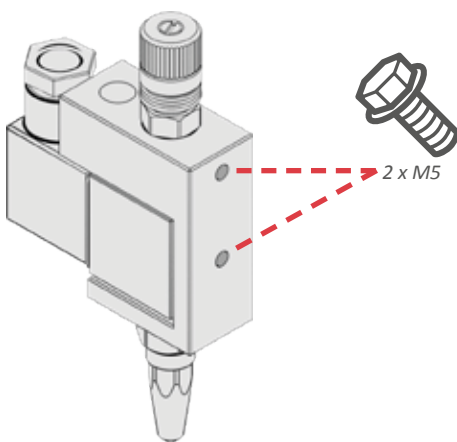

4.2 Contact-less gluing application



Where is possible it's always better to adopt this type of application because it is convenient both for the ease of application and to avoid the wear of the nozzle.

The **ideal working position** of the valve is vertical, with the nozzle facing downwards.

It's possible to tilt the valve of $\pm 45^\circ$ degrees (see next page).


The **optimal distance** between the nozzle and the surface to be glue is between 5 and 10 mm (see next page).

Other different positions are possible upon approval of the Zator.

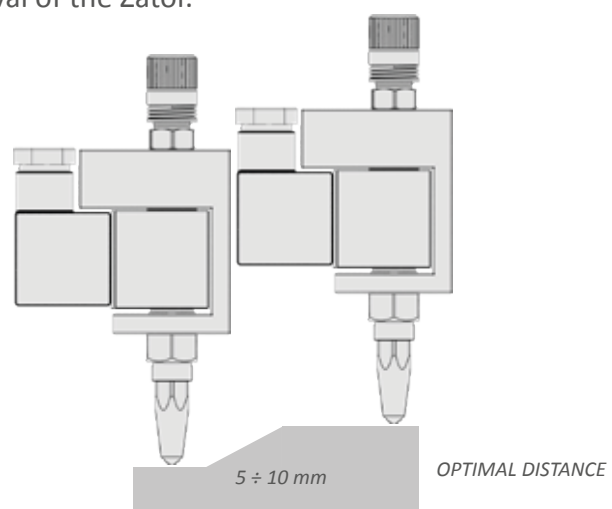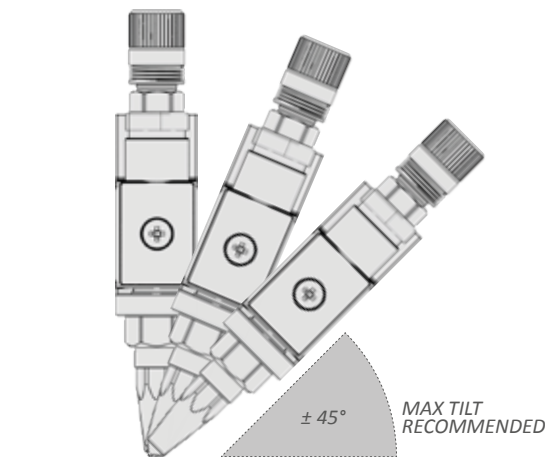

4.3 Contact gluing application


The contact gluing application is used when is necessary to dispense very thin glue lines. In this case the valve must always be positioned vertically, with the nozzle facing downwards but with an **inclination of $7 \div 8^\circ$** with respect to its axis towards the direction of travel and the nozzle must lightly touch the surface to be glued.

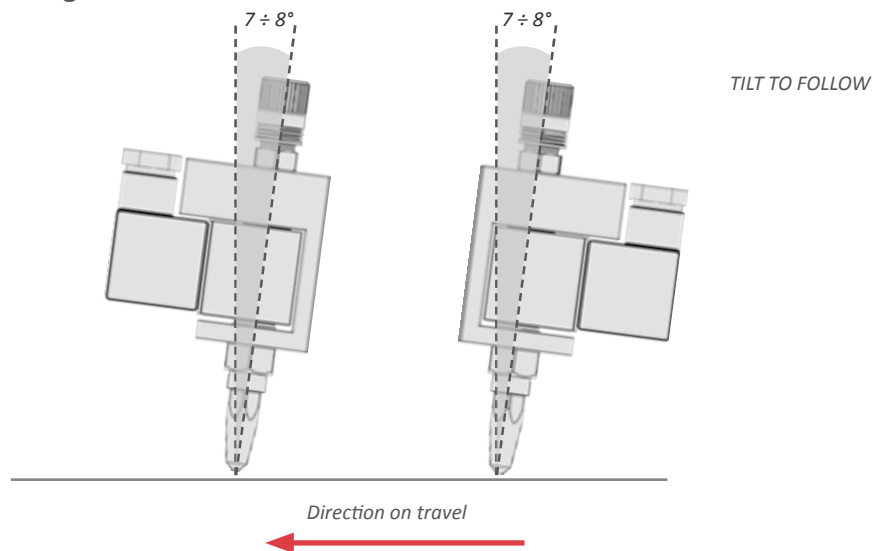

4.4 Fluid supply connection

The valve must be connected to a *glue feed units**. A *flexible plastic pipe** (**for applications up to 8 bar**) must be connected to a *pipe fitting (M5)** to be screwed on the fluid supply connection of the valve. For applications with working pressure **over 8 bar** use *fittings and pipes** for high pressure must be used.


**Parts are supplied separately*

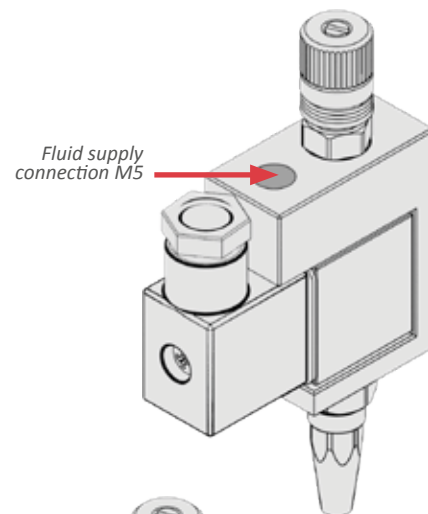

4.5 Electrical connection

Connect an *electrical cable** with cross-section not less than 0.35 mm to the coil connector. The valve must be electronically controlled by a Zator's microprocessor control or alternatively with an instrument tested and approved by Zator.

**Parts are supplied separately*

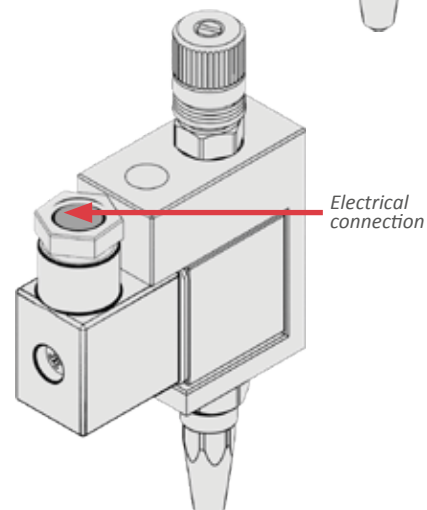

5 VALVE ADJUSTMENTS

5.1 Fluid quantity adjustment


The adjustment of the dispensed fluid quantity (ex. glue) by the valve is determined by:

- The nozzle diameter: **greater diameter → more fluid quantity**
- The fluid pressure: **greater pressure → more fluid quantity**
- The needle travel adjustment: **greater needle travel → more fluid quantity**

Operating on this points it's possible to adjust the dispensed fluid quantity.

5.2 Needle travel adjustment

To adjust the needle travel, operate on the *micrometric adjustment handle* placed on the top of the valve. This handle allows to adjust with a fine control the dots or lines size that are dispensed.

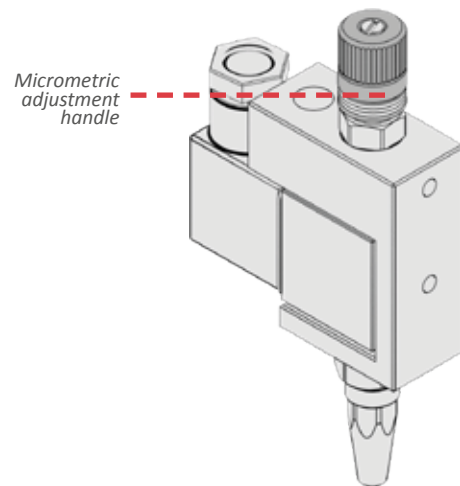

- A. Turn **counter-clockwise** to **increase** the needle travel therefore the dispensed fluid quantity.




Be careful not to unscrew too much the adjustment, because above a certain limit the magnet inside the valve will go out from its working range, obstructing the correct valve operating..

- B. Turn **clockwise** to **decrease** the needle travel therefore the dispensed fluid quantity. At the **end of the needle travel**, the valve is **completely closed**, therefore it doesn't dispense any fluid.



Don't tighten with excessive force the needle adjustment handle to avoid damage to the nozzle and needle.

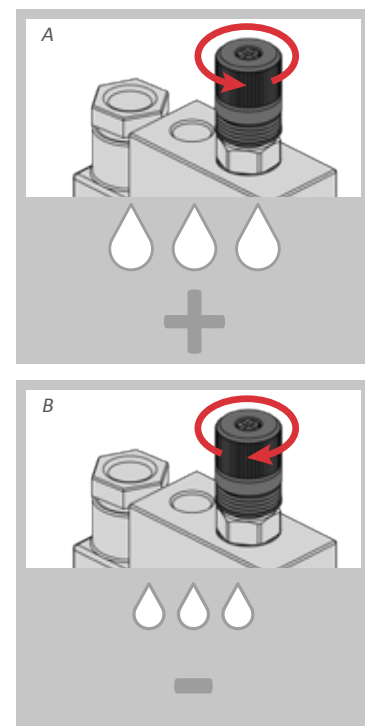

6 MAINTENANCE

6.1 General norms

The *electromagnetic valve DLK22LT-LC*, thanks to the construction methods and employed materials, is easy to maintain. A minimal, simple, accurate and constant maintenance allows a long-lasting and regular functioning of the valve, keeping unchanged its performance.



- For the general cleaning of the valve **don't use** metallic, sharp or pointed objects. Use only soft brushes or cotton rags.
- All the maintenance works on the valve **must be performed by qualified personnel** and after the supply pressure system has been discharged
- For the nozzle cleaning **use only** cleaning needles supplied by the valve manufacturer: if you use other sharp objects the nozzle could be **damaged**
- **Use only** original spare parts
- The valve must be washed **only and exclusively** with water, especially if you need to replace the nozzle or the needle
- Every evening and if you expect a long work break put some grease on the nozzle tip

6.2 Maintenance program

	TIMING*	WHAT TO DO
1	Every day, before the start production	<ul style="list-style-type: none"> • Do a valve test • Clean the valve externally
2	Every day, at the end of production	<ul style="list-style-type: none"> • Do a valve test • Clean the valve externally • Put some grease on the nozzle tip
3	Before a production break longer than two weeks	<ul style="list-style-type: none"> • Drain the fluid from the system and wash it completely with water • Leave the system with water inside
4	After a production break longer than two weeks	Discharge the water from the system and fill it with the adhesive fluid
5	Every month or after 2000 working hours	As point 3 and 4
6	Every year or after 4000 working hours	<ul style="list-style-type: none"> • As point 3 and 4 • Replace possible worn parts

*Approximate values that can change depending on the type of glue, adhesive or fluid used.
For the use of special fluid we recommend to contact the Zator company for any questions.


6.3 Cleaning and/or replacement of the nozzle

Before you disassembling, cleaning or replacing the nozzle the following steps **must be done**:


- Wash the valve with water
- **Discharge the pressure from the supply system**

Then proceed as follows:

- 1 Loosen the *micrometric adjustment handle*, turning it counter-clockwise until it doesn't resist anymore;

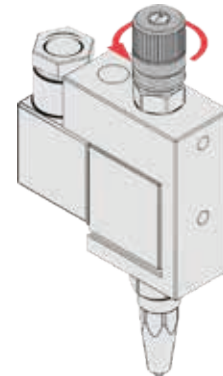


- 2 Unscrew the *nozzle* with a 10mm wrench by holding the *guide sleeve* with a 15mm wrench;

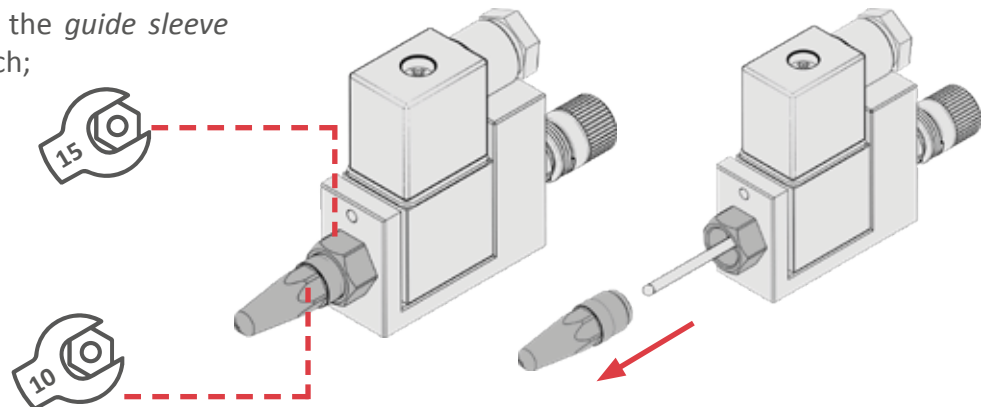

After removing the nozzle, to clean it:

- 3 Put the *nozzle* under running water then blow it with compressed air and clean the *nozzle* hole with the *cleaning needle*;
- 4 Repeat the step until you have removed all the impurities inside and outside the *nozzle*;
- 5 Screw the *nozzle* on the valve with a 10mm wrench.

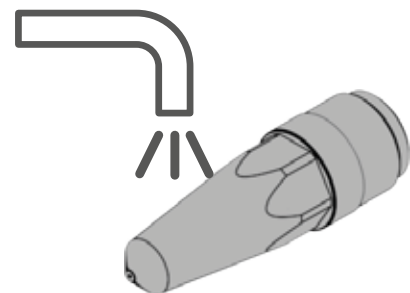


6.4 Valve disassembly

Before you disassembling the valve the following steps **must be done**:


- Wash the valve with water
- **Discharge the pressure from the supply system**

Then proceed as follows:


- 1 Unscrew the coil connector *screw*;

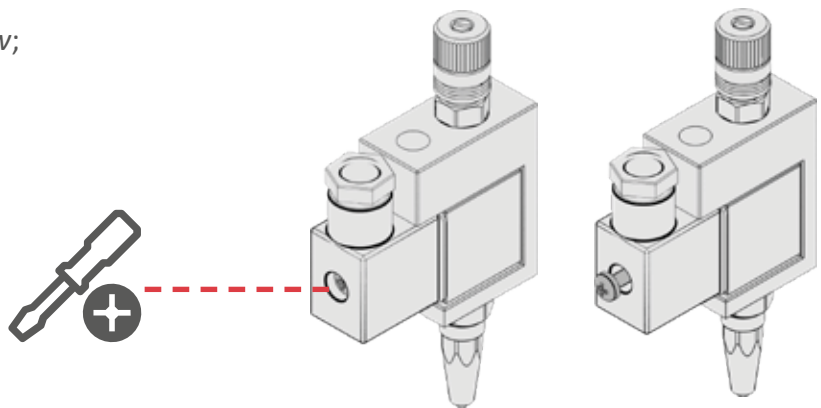


- 2 Then pull out the coil connector;

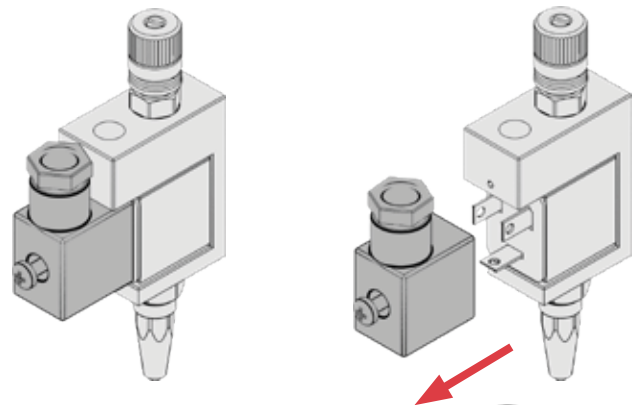

- 3 Unscrew the *micrometric adjustment* with a 13mm wrench, then pull it out (don't operate on the adjustment handle);

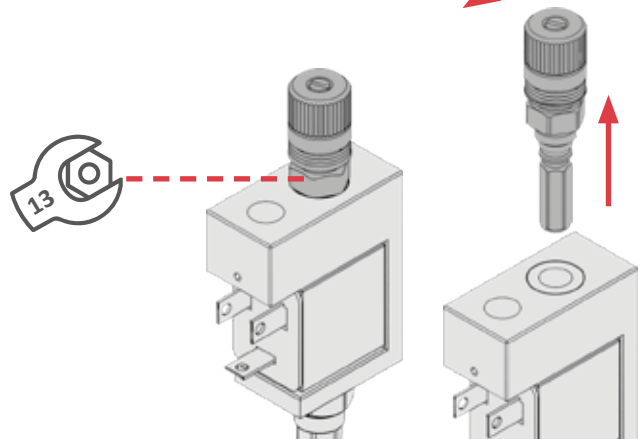


- 4 Check the wear of the micrometric adjustment O-ring and if it is necessary, replace it. Always grease* the new O-rings before assembling them;

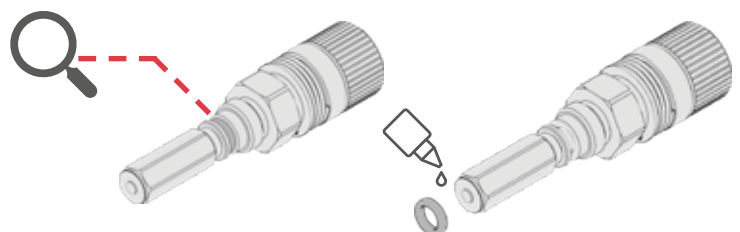


*Use silicon-based grease or oil specific for O-rings. For any questions or information contact the Zator company.


- 5 Unscrew the *nozzle* with a 10mm wrench by holding the *guide sleeve* with a 15mm wrench;

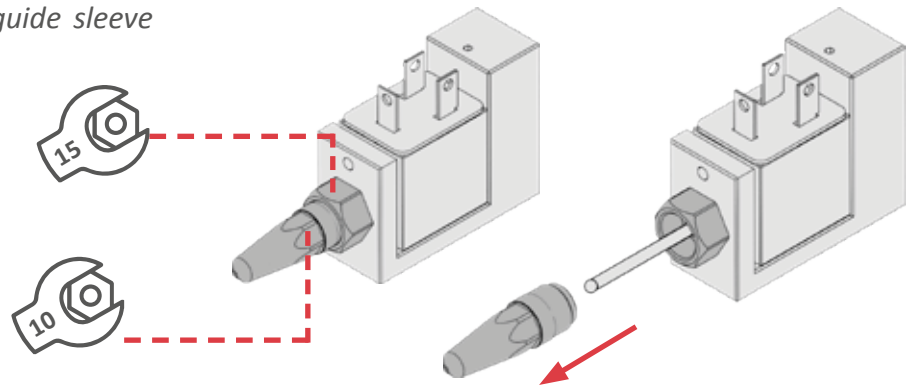


- 6 Pull out the needle using fingers (to disassemble the needle see *section 6.5 - Needle disassembly*);

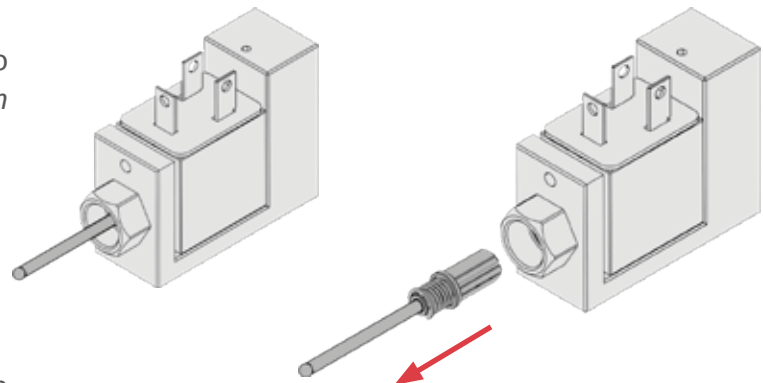


- 7 Unscrew the *guide sleeve* with a 15mm wrench, then pull it out from the valve, **being careful** not to drop the coil on the ground because it will be free to move;

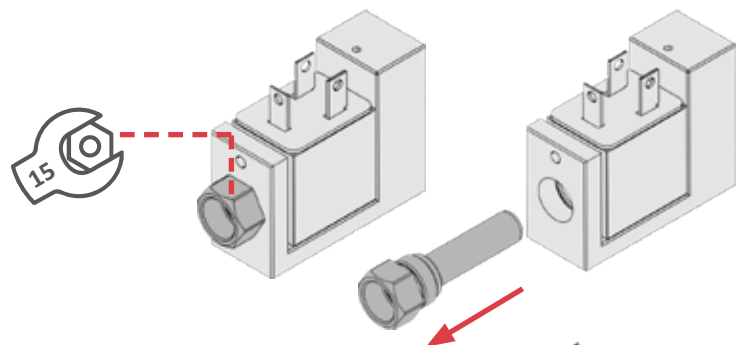

- 8 Remove the *coil* from the valve body;

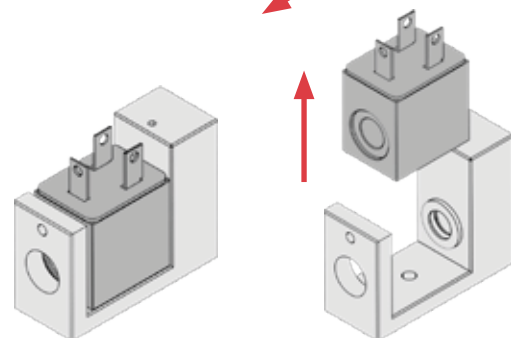

- 9 Check the wear of the *O-ring* inside the valve body and if it is necessary, replace it. Always grease* the new O-rings before assembling them;

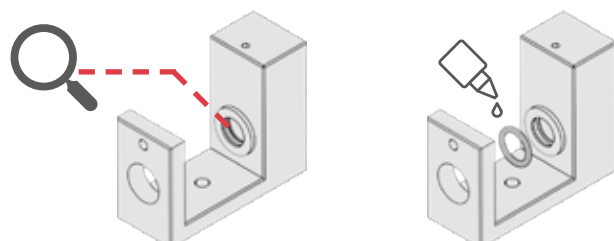


*Use silicon-based grease or oil specific for O-rings. For any questions or information contact the Zator company.


6.5 Needle disassembly

To disassemble the *needle* and/or replace the spring kit, proceed as follows:


- 1 Extract the *snap ring* that keeps the spring compressed with the help of a small screwdriver;

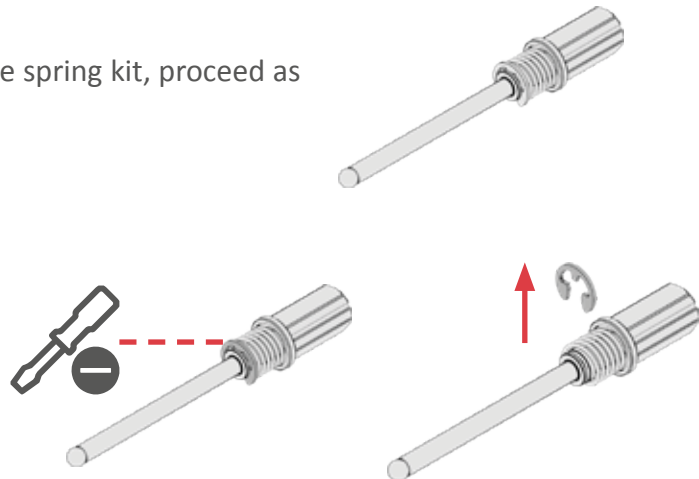

- 2 Pull out the *spring* from the needle;


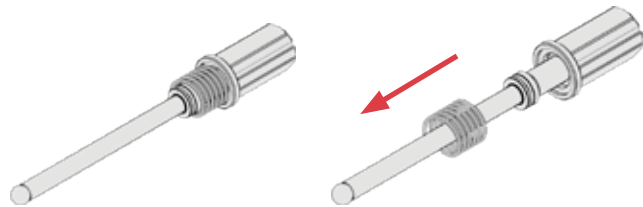


- 3 Finally pull out the *washer*.

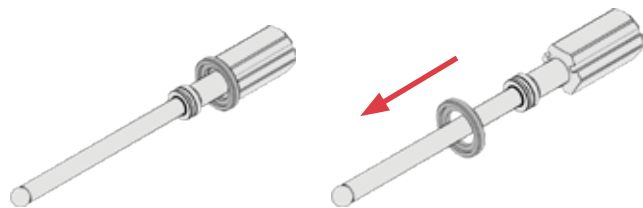


6.6 Needle assembly



- 1 Insert the *washer* in the needle **being careful** to the **assembly direction**;

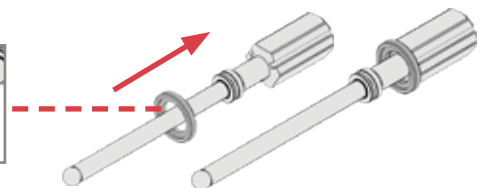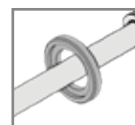

- 2 Insert the *spring* in the needle;

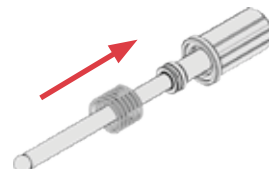

- 3 Finally insert the *snap ring* with the help of a smooth plier*.

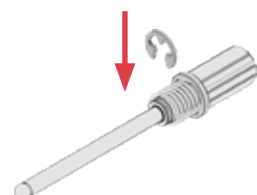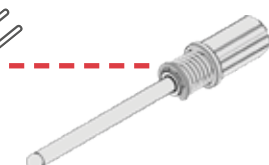

***Pay attention** to not scratch and/or bend the needle with the plier.


6.7 Valve assembly

Before to assembling the valve the following steps **must be done**:


- Remove the residual glue from the valve using a wet rag or soft brush
- Clean the nozzle and if it is necessary put it under running water then blow it with compressed air and clean the nozzle hole with the cleaning needle
- Check the wear of the O-rings and if it is necessary replace it
- Before the assembly always grease the O-rings

Then proceed as follows:


- 1 Place the *coil* into the valve body **being careful to the assembly direction**;

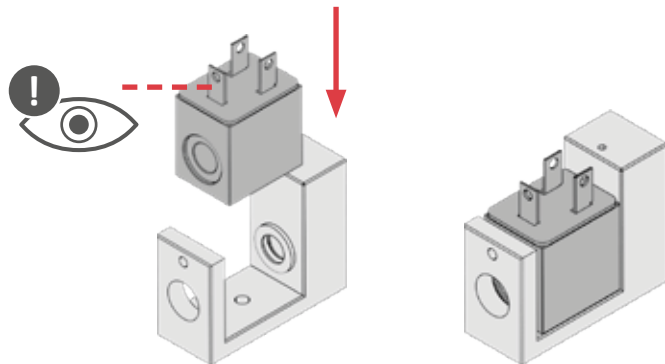


- 2 Insert the *guide sleeve* through the valve body and the coil, then screw it with a 15mm wrench;

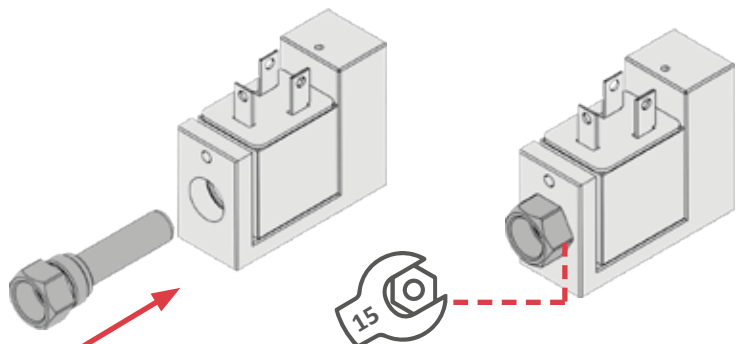


- 3 Insert the *micrometric adjustment* and with a 13mm wrench screw it into the valve body;

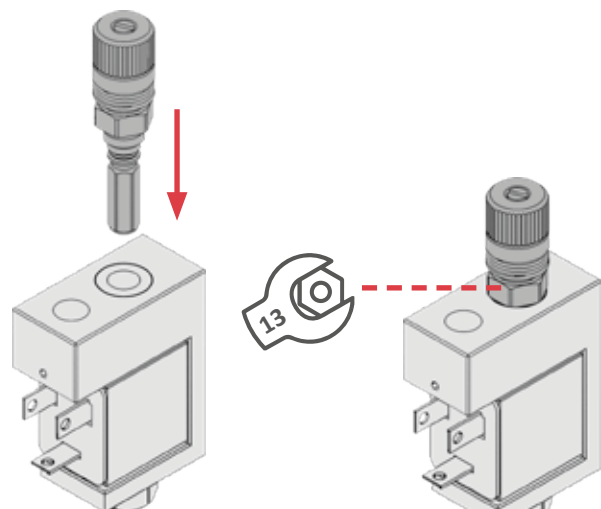


- 4 Insert the *needle* inside the guide sleeve;

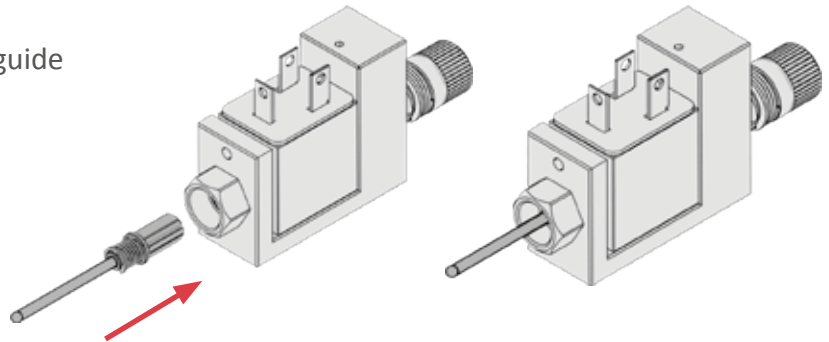


- 5 Screw* the *nozzle* with a 10mm wrench

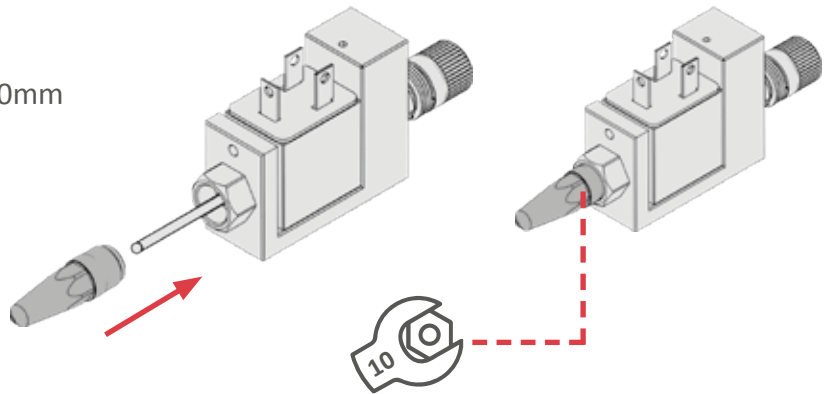


***Before screw the nozzle**, check the micrometric adjustment handle is completely loosened to avoid damage to the nozzle and needle. To loosen the handle, turning it counter-clockwise until it doesn't resist anymore.

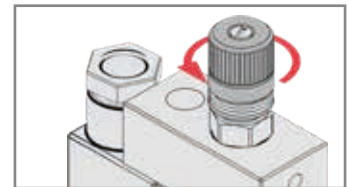

- 6 Insert the *coil connector*;

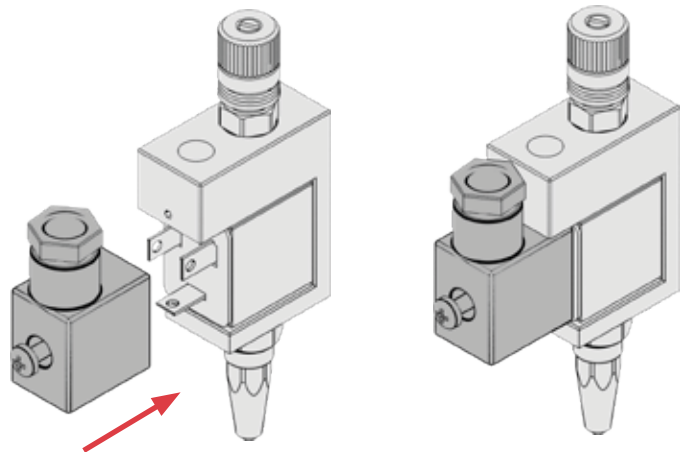

- 7 Finally screw the *coil connector* screw.

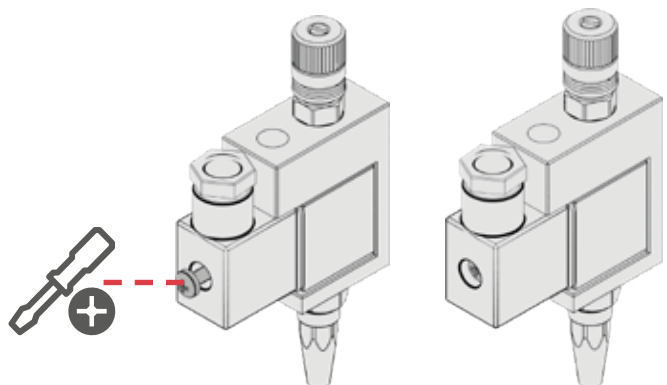

7 TROUBLE SHOOTING



CAUTION: the trouble shooting **must be performed only by qualified personnel** observing the safety norms.

TROUBLE	POSSIBLE CAUSE	WHAT TO DO
No or little quantity of dispensed fluid	The valve doesn't receive any signal	<ul style="list-style-type: none"> • Check the cables of the valve, the start sensor and the encoder; • Check the functioning data setted on the control; • Make a manual test
	The pressure of the fluid is low or missing	Check the supply pressure
	The nozzle is clogged	Unscrew and clean the nozzle
	The filter is dirty (If in use)	Wash or replace the filter
	Bent pipe	Check the condition of the supply pipe
	Residual glue into the system	Wash the complete system
Leak of fluid from the adjustment	Adjustment O-ring is damaged	Replace the adjustment O-ring
Leak of fluid from the top of the coil	O-ring inside the valve body is damaged	Replace the O-ring inside the valve body
Nozzle drips fluid even if the valve is not activated	Presence of dirt inside the nozzle	Clean or replace the nozzle
The valve is activated with a lag	The needle spring is deteriorated	Replace the needle spring

8 MODELS

code	description
B2771XX00	Electromagnetic valve DLK22LT 6 Volt nozzle with tungsten carbide tip
B2790XX00	Electromagnetic valve DLK22LT 12 Volt nozzle with tungsten carbide tip
B2766XX00	Electromagnetic valve DLK22LT 24 Volt nozzle with tungsten carbide tip
<i>Replace XX value with nozzle diameter desired Available nozzle diameters from 0,5 to 1,5 mm</i>	




code	description
B2772XX00	Electromagnetic valve DLK22LC 6 Volt nozzle with ceramic tip
B2791XX00	Electromagnetic valve DLK22LC 12 Volt nozzle with ceramic tip
B2767XX00	Electromagnetic valve DLK22LC 24 Volt nozzle with ceramic tip
<i>Replace XX value with nozzle diameter desired Available nozzle diameters from 0,2 to 1,5 mm</i>	






9 PARTS LIST

pos.	code	q.ty	description
1	B27000023	1	Micrometric adjustment
2	K92010401	1	O-ring
3	B27000016	1	Valve body
4	K92010901	1	O-ring
5	B27000052 B27000056 B27000053	1	Coil 6 Volt Coil 12 Volt Coil 24 Volt
6	CNN000027	1	Connector complete
7	GSK000020	1	Gasket
8	CNN000028	1	Connector
9	SC81030302	1	Connector screw
10	B27001300	1	Armature housing
11	B27003400	1	Needle LV for nozzle with ceramic tip
12	B27003300	1	Needle LV
13	B27003500	1	Spring kit
14	NZLE0102XXX	1	Nozzle LV
Replace XXX value with nozzle diameter desired Available nozzle diameters from 0,3 to 1,5 mm			
15	H854500XX	1	Nozzle LT with tungsten carbide tip
Replace XX value with nozzle diameter desired Available nozzle diameters from 0,5 to 1,5 mm			
16	H855500XX	1	Nozzle LC with ceramic tip
Replace XX value with nozzle diameter desired Available nozzle diameters from 0,2 to 1,5 mm			
	KGNO000014	1	Gasket kit

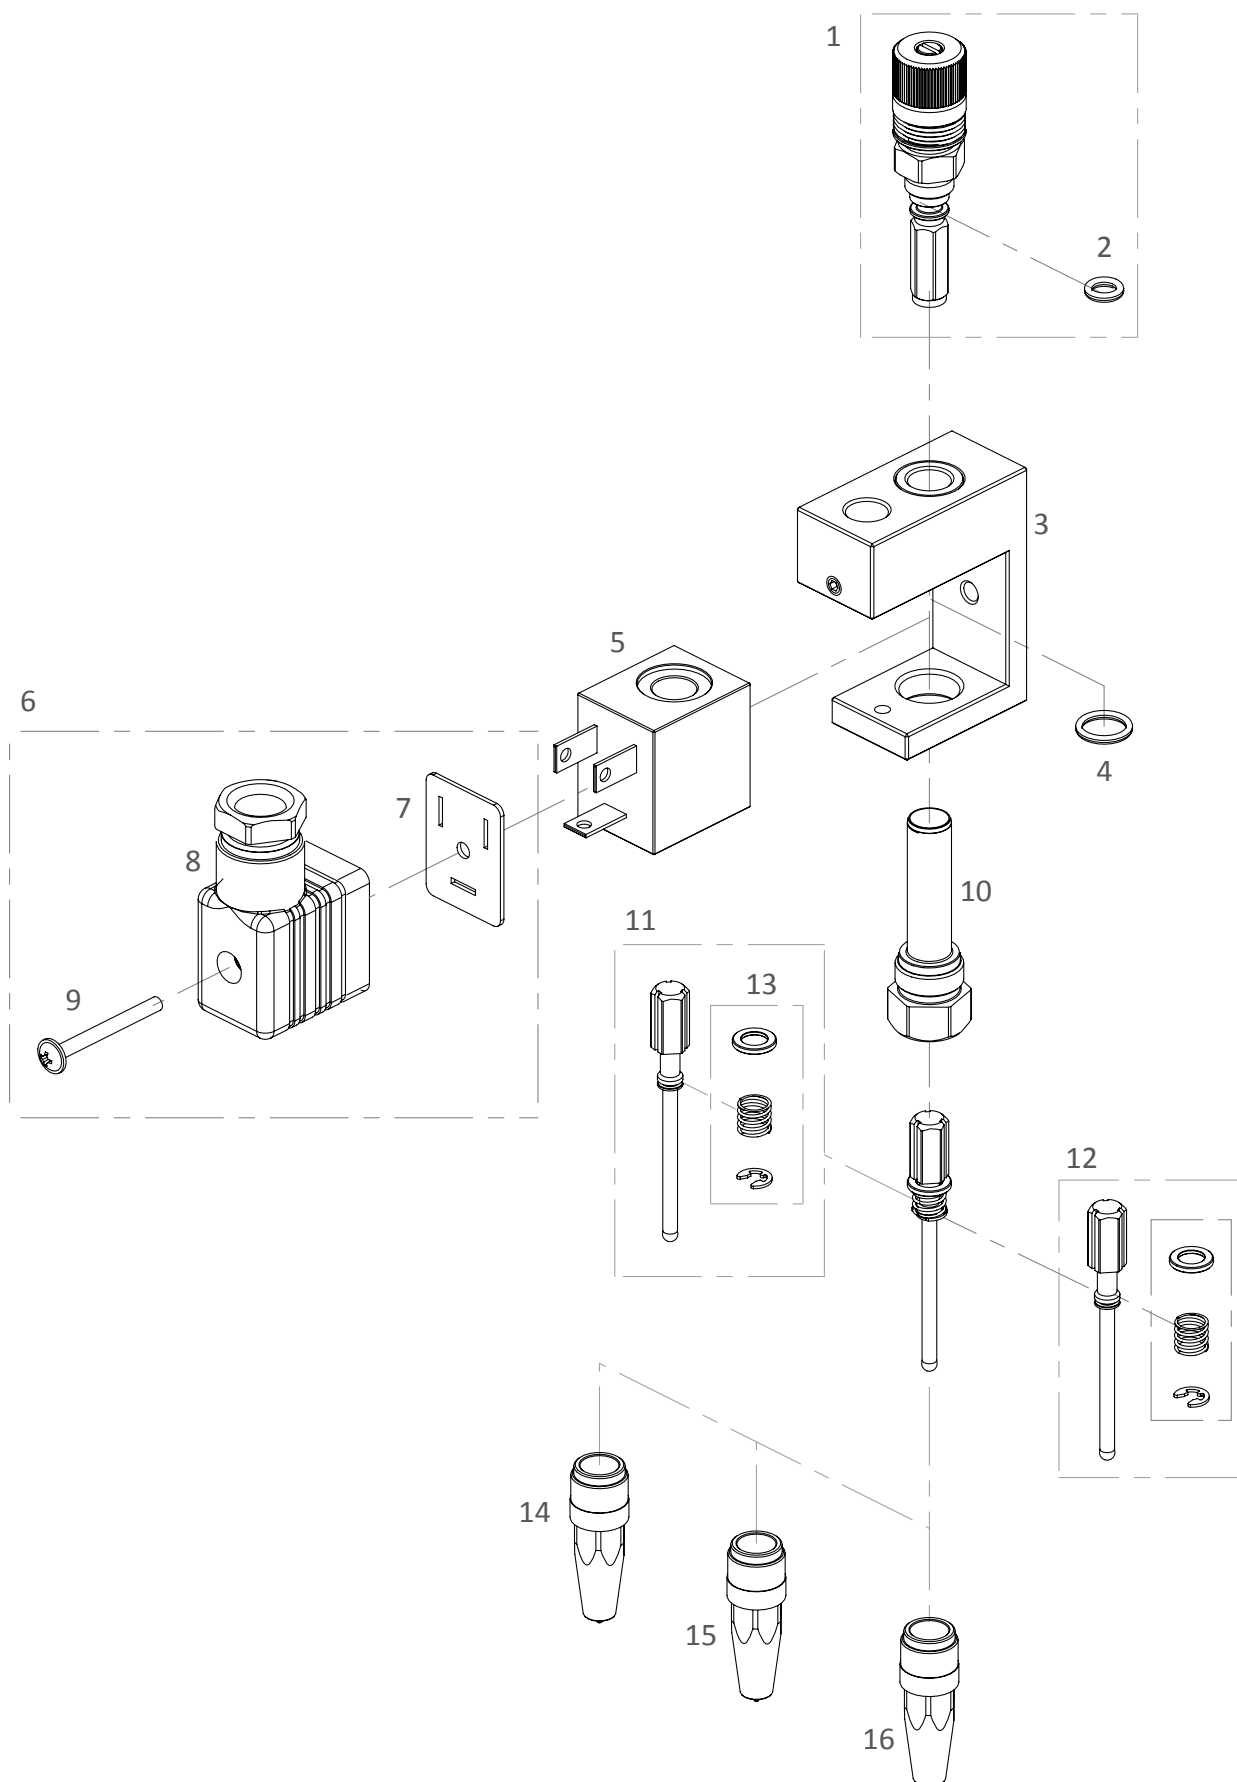

The images in this document are considered for illustration only. The company reserves the right for any changes without notice. Names, trademarks and logos are property of the author.

10 DIMENSIONS

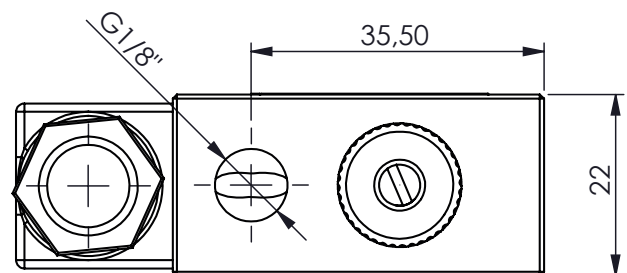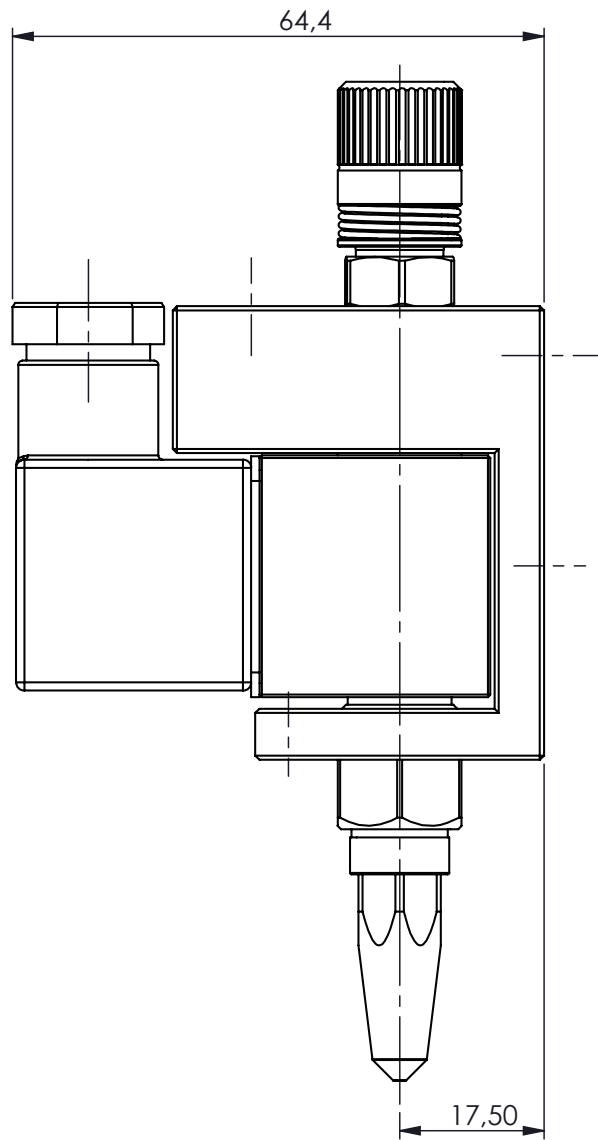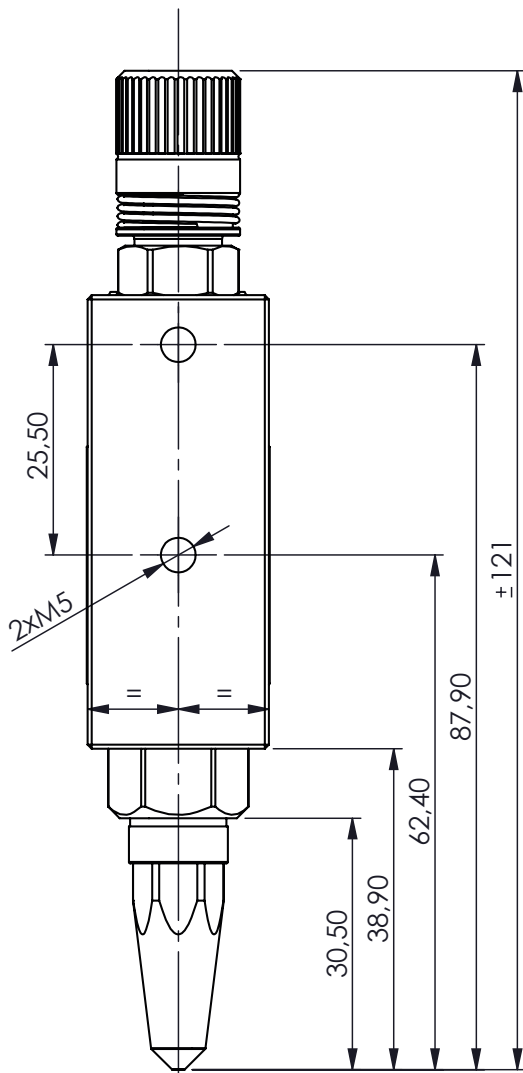



NOTE

[illegible]

38

ZATOR SRL

Via Galvani, 11
20095 Cusano Milanino (MI)
Italy

Tel. +39 02 66403235

Fax +39 02 66403215

info@zator.it

www.zator.it

